

Visual Product Tree

Contents

VPT - Introduction.....	3
VPT_TOC.....	4
VPT - Table of content.....	4
VPT - Add VPT to TOC.....	5
VPT_Partslist.....	8
Parts List - Administration.....	8
Parts List - Add Parts.....	9
Parts List - Edit Parts.....	12
Parts List - Delete Parts.....	15
Parts List - Display.....	18
Parts List - List Parts.....	19
Parts List - Search Parts.....	22
VPT_Builder.....	26
Builder - Introduction.....	26
Builder - Add.....	29
Builder - Delete.....	32
Builder - Add Rollover.....	35
Builder - Edit Rollover.....	38
Builder - Delete Rollover.....	42
VPT_Reviewer.....	46
Reviewer - Reviewer.....	46
Reviewer - Attachment.....	49
Flat View - BOM (Bill-of-materials).....	51

VPT - Introduction

This document describes the introduction to VPT

Visual Product Tree (VPT) is an interactive web based navigational structure of the company products. It allows viewer to navigate through the products; from the top level assembly to sub-assemblies to the components level, visually and interactively.

Visual Product Tree is designed to provide technical support to customers, field service technicians, manufacturing engineers, manufacturing operations and technical training personnel.

This online documentation is designed to give you an understanding of VPT application and how to use it.

VPT application has five major elements as described below:

1. Table-of-content

- Table-of-Content lists all existing Visual Product Tree created by VPT application
- Table-of-Content also allows you to add new Visual Product Tree

2. Parts List (Record Administration) is used to manage records of the parts in the parts list

- Parts List allows you to add parts to the parts list
- Parts List allows you to edit parts into the parts list
- Parts List allows you to delete parts from the parts list
- Parts List allows you to display parts from the parts list
- Parts List allows you to list three parts per page from the parts list
- Parts List allows you to search parts by Part No and/or Description from the parts list

3. VPT Builder is used to manage the drill-down structure of the Visual Product Tree with rollovers

- Sub-component Section
 - Sub-Component section allows you to add parts to create drill-down structure of Visual Product Tree
 - Sub-Component section allows you to delete parts from the drill-down structure of Visual Product Tree
- Rollover Section
 - Rollover section allows you to add rollovers to the Sub-Components
 - Rollover section allows you to edit rollovers to the Sub-Components
 - Rollover section allows you to delete rollovers of the Sub-Components

4. VPT Reviewer is used to test the Visual Product Tree

- Check the drill-down structure with rollovers in the Sub-Component section
- Check the drill-down structure with rollovers in the Interactive Image section
- Check the backward and jump back links in the Navigation Trail section

5. VPT Flatview is used to check the Product Tree in the form of Bill-of-Material (BOM)

- Product hierarchy is displayed according to the top level assembly, their sub-assemblies and their components, with part numbers and their descriptions

VPT_TOC

VPT - Table of content


This document describes the table of content of VPT

When you open the VPT Application, Table of Content (TOC) is displayed with the list of all existing Visual Product Tree available. You can select any of the Visual Product Tree to view, or you can add new one, as shown in [Figure 1](#).

Each Visual Product Tree has four major aspects in the creation of VPT as shown below:

1. Parts List: You add all the parts (components, sub-assembly, assembly etc) to the Parts List.
2. VPT Builder: Use parts from the Parts List and build the drill-down structure of the assembly and sub-assembly for the product.
3. VPT Viewer: This is the end result which will be seen by the users, customers, field service technicians, manufacturing engineers, manufacturing operations and technical training personnel.
4. Flat View: This view displays a complete Product Tree in the form of Bill-of-Material; Product hierarchy is displayed according to the top level assembly, their sub-assemblies and their components, with part numbers and their descriptions.

 Figure 1: VPT Table of Content

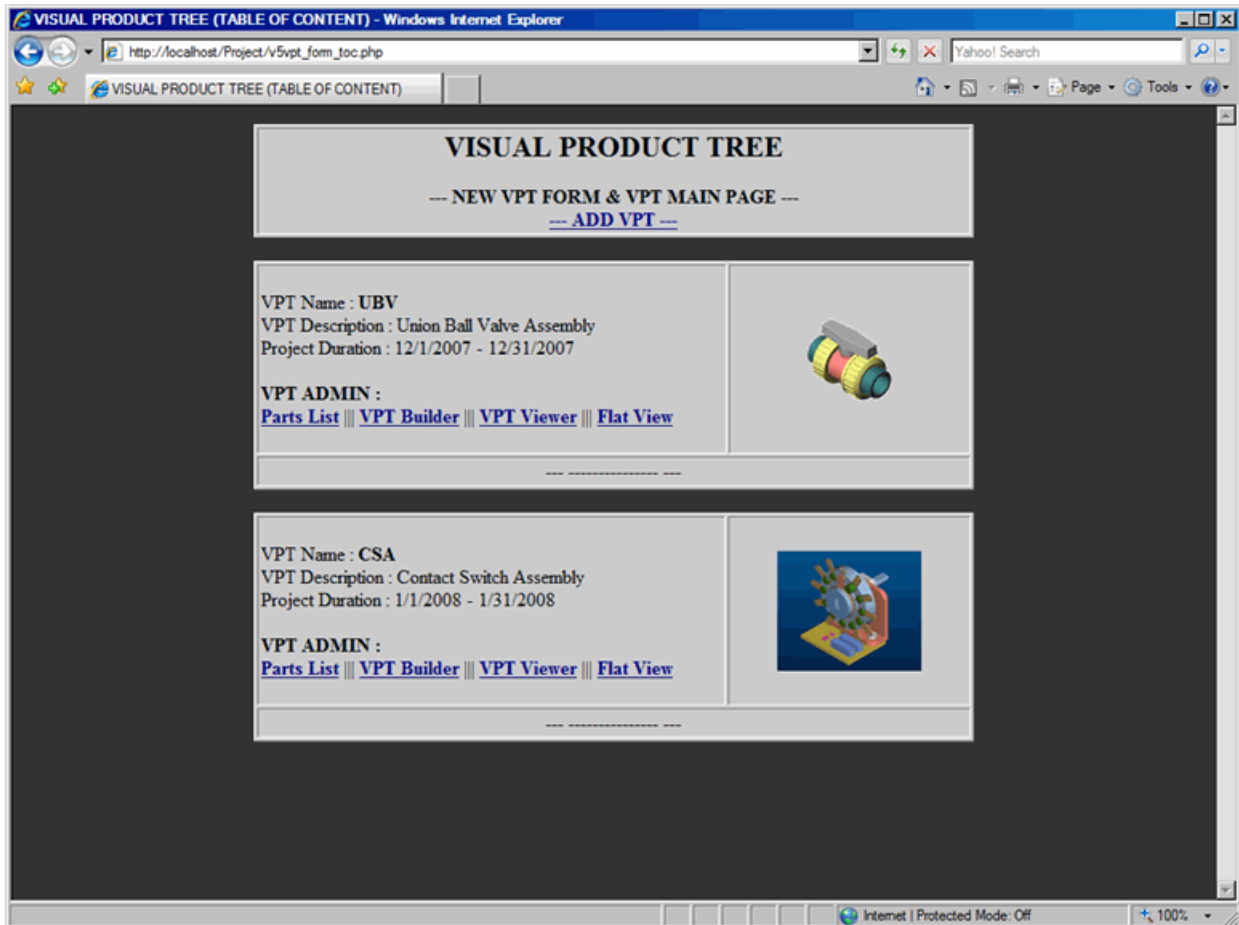


VPT - Add VPT to TOC

This document describes how to add vpt to the table of content

In order to add new Visual Product Tree to the Table Of Content (TOC), proceed with the following steps:

1. From the TOC, click on Add VPT link, which will display an Add Form window, as shown in [Figure 2: Add VPT Form](#) on page 5
2. In the VPT Name text box, type in the name for new Visual Product Tree.
3. In the VPT Description text box, type in the description for new Visual Product Tree.
4. Click on the Calendar link to select Project Start Date.
5. Click on the Calendar link to select Project Finish Date.
6. In the GIF File, provide a gif image, which will be displayed as thumbnail.
7. In the JPG File, provide a jpg image, which will be displayed as main image.
8. Submit the form to process your request for the new Visual Product Tree.

 **Note:** In Add VPT Form, you must provide information for Part No and Part Description; Otherwise, you will get an error message prompting you to add that information.


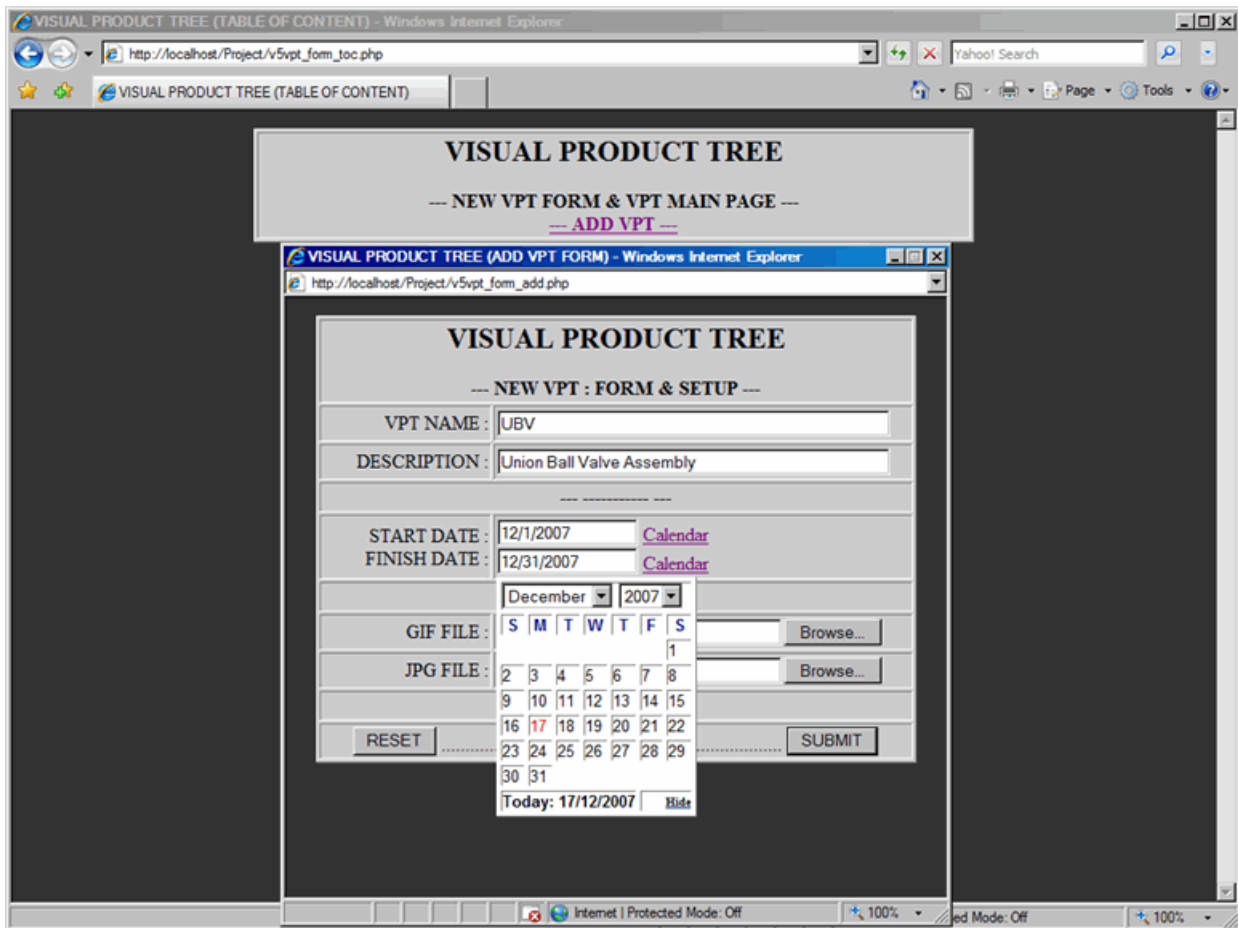
 **Note:** GIF images are 100x100 pixels and JPG images are 450x375 pixels. GIF and JPG images can be added later. However, if you do not provide images, you will get an error message in the Form Confirmation window

Figure 2: Add VPT Form



The screenshot displays two overlapping browser windows. The background window is titled 'VISUAL PRODUCT TREE (TABLE OF CONTENT)' and contains a header 'VISUAL PRODUCT TREE' and a sub-header '--- NEW VPT FORM & VPT MAIN PAGE ---' with a link '--- ADD VPT ---'. The foreground window is titled 'VISUAL PRODUCT TREE (ADD VPT FORM)' and contains a form titled 'VISUAL PRODUCT TREE' with the sub-header '--- NEW VPT : FORM & SETUP ---'. The form includes the following fields and controls:

- VPT NAME: Text box containing 'UBV'
- DESCRIPTION: Text box containing 'Union Ball Valve Assembly'
- START DATE: Text box containing '12/1/2007' with a 'Calendar' link.
- FINISH DATE: Text box containing '12/31/2007' with a 'Calendar' link.
- Month and Year: Dropdown menus showing 'December' and '2007'.
- GIF FILE: A row of buttons labeled 'S', 'M', 'T', 'W', 'T', 'F', 'S' and a 'Browse...' button.
- JPG FILE: A calendar grid showing dates from 2 to 31, with '17' highlighted, and a 'Browse...' button.
- Buttons: 'RESET' and 'SUBMIT'.

Once the Add VPT Form is submitted, confirmation window will be displayed with the following information, refer to [Figure 3: VPT Form Confirmation](#) on page 6:

- Visual Product Tree Information
 - Name (UBV) of the new Visual Product Tree
 - Description (Union Ball Valve Assembly) of the new Visual Product Tree
 - Project start date (12/1/2007)
 - Project finish date (12/31/2007)
 - GIF and JPG files are submitted successfully or not
 - GIF and JPG file names
- Additional Technical Information
 - Project creation date (12/17/2007)
 - Database (db_UBV) is created to store new Visual Product Tree data
 - Table (UBV) is created to store Assembly and Sub-assembly data
 - Table (UBV_partlist) is created to store Part related information
 - Table (UBV_roll) is created to store Rollover related information
 - Directory (UBV_img) is created to store GIF and JPG images
 - Directory (UBV_roll) is created to store Rollover images
 - Directory (UBV_attach) is created to store attachment files such as PDF or 3D Model

Click on the Close Window link and new VPT will be listed in the TOC as shown in [Figure 4: New VPT Created](#) on page 6.

Figure 3: VPT Form Confirmation

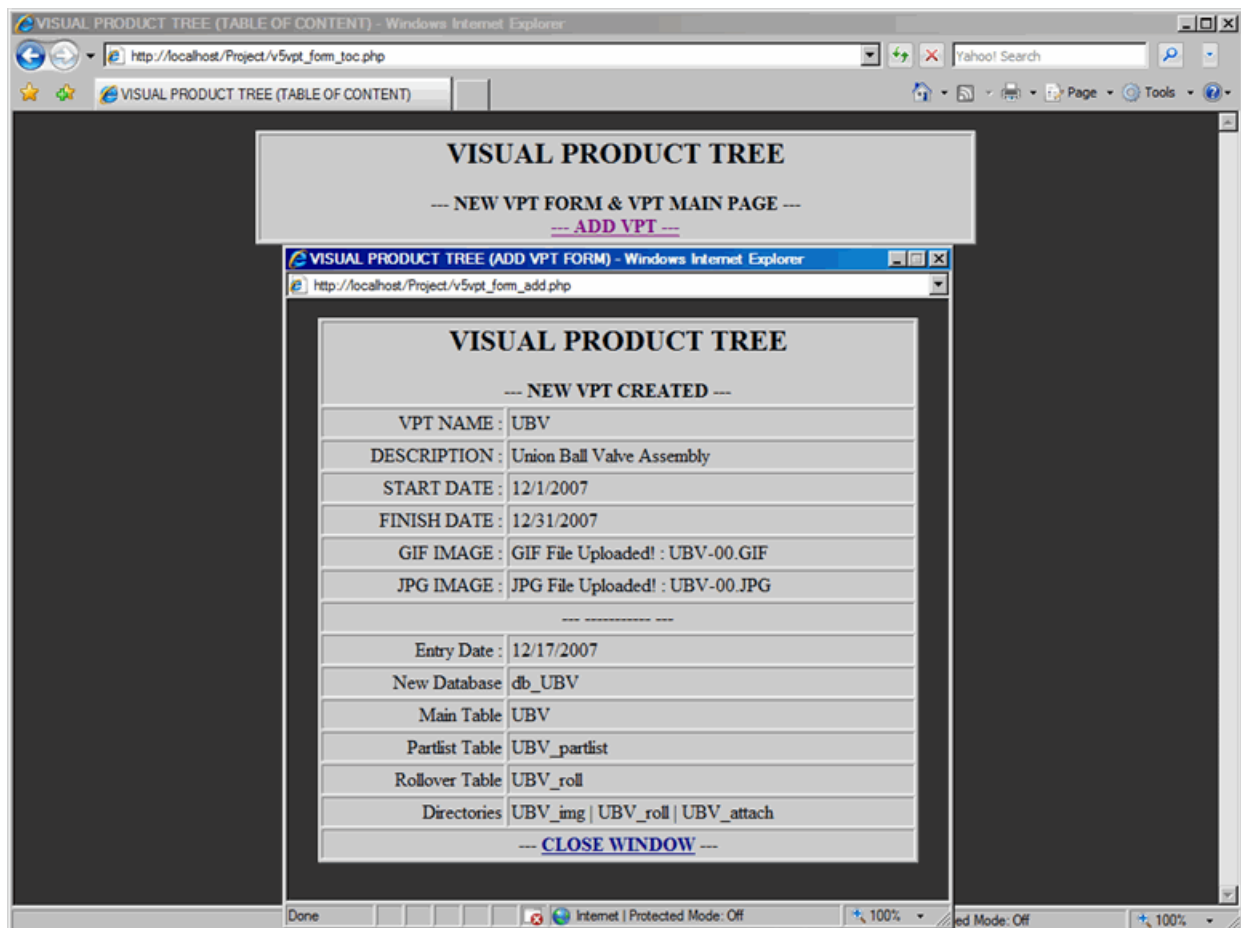 


Figure 4: New VPT Created

VISUAL PRODUCT TREE (TABLE OF CONTENT) - Windows Internet Explorer

http://localhost/Project/v5vpt_form_toc.php

Yahoo! Search

VISUAL PRODUCT TREE (TABLE OF CONTENT)


Page Tools

VISUAL PRODUCT TREE

--- NEW VPT FORM & VPT MAIN PAGE ---
[-- ADD VPT --](#)

VPT Name : UBV
VPT Description : Union Ball Valve Assembly
Project Duration : 12/1/2007 - 12/31/2007

VPT ADMIN :
[Parts List](#) || [VPT Builder](#) || [VPT Viewer](#) || [Flat View](#)



Done

Internet | Protected Mode: Off

100%

VPT_Partslist

Parts List - Administration

This document describes administration of Parts List

Parts List is the database of all parts (components, sub-assembly, or assembly) that makes up the Visual Product Tree. Parts List (Record Administration) is the first process in building of new Visual Product Tree. Add all the components, sub-assemblies and assemblies into the Parts List; so it can be used later on, in building the drill-down structure of the Product.

From the TOC, click on Parts List link, which will display Record Administration window. By default, top level assembly is already listed in the Record Administration when VPT was created in the TOC.

Table 1: Partslist - Record Administration

Features	Description
Add	Add parts to the partslist
Edit	Edit parts in the partslist
Delete	Delete parts from the partslist
Display	Display details of the parts
Record List	Display 10 parts per page
Record Search	Search parts by Part No. and/or keywords
Close Window	Close the partslist window


Record Administration window has seven major aspects as described below, refer to [Figure 5: Partslist Administration](#) on page 8:

1. Add: Add link allows you to add parts to the Parts List.
2. Edit: Edit link allows you to edit any information of the part into the Parts List.
3. Delete: Delete link allows you to delete the part from the Parts List.
4. Display: Display link allows you to display information of the part from the Parts List.
5. Record List: Record List link displays three parts per page, with navigation link at the bottom of each page.
6. Record Search: Record Search link allows you to search for any part or parts.
7. Close Window: Click on Close Window to exit Record Administration window.



Note: Record Administration (Parts List) window displays detailed information about each part such as Part No., Description, Attachments (PDF documentation or 3D Model), Images (GIF thumbnail and JPG main image).

 Figure 5: Partslist Administration

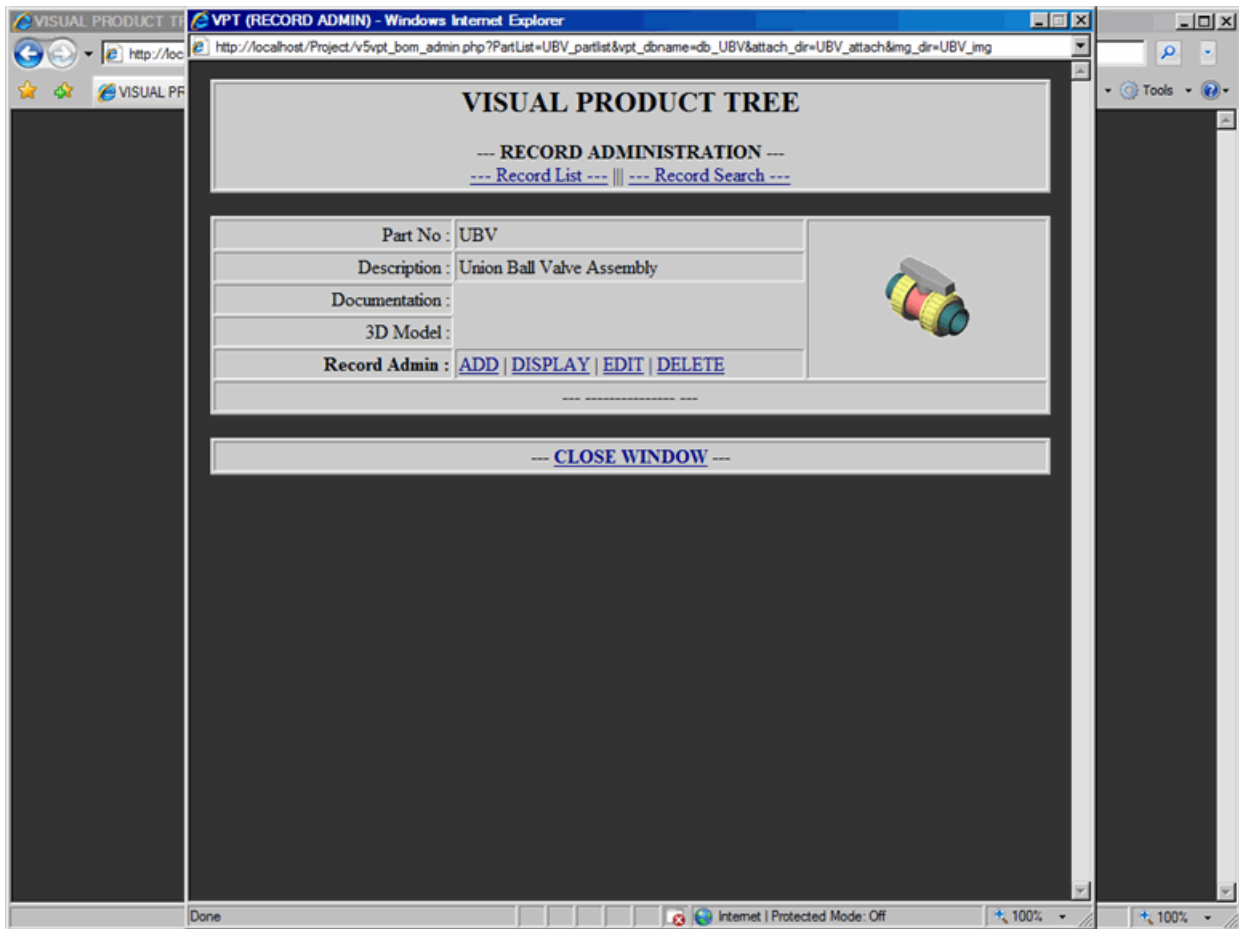



Parts List - Add Parts

This document describes how to add parts to Parts List

In order to add new part to the Parts List, proceed with the following steps:

1. From the Record Administration window, click on any Add link, which will display Record Add Form, as shown in *Figure 6: Admin - Add Form* on page 9.
2. In Part No text box, type in the part number of the part.
3. In Part Description text box, type in the description of the part.
4. In PDF File, provide a PDF documentation as an attachment.
5. In 3D Model File, provide CAD 3D Model as an attachment.
6. In GIF File, provide a gif image which you would like to display as thumbnail.
7. In JPG File, provide a jpg image which you would like to display as main image.
8. Submit the form to process your request to add part.

 **Note:** In Record Add Form, you must provide information for Part No and Part Description; Otherwise, you will get an error message prompting you to add that information.

 **Note:** In Record Add Form, if you enter Part No that already exists in the Parts List, you will get an error message and process will be terminated.


 **Note:** GIF images are 100x100 pixels and JPG images are 450x375 pixels. GIF and JPG images can be added later. However, if you do not provide images, you will get an error message in the Form Confirmation window.

Figure 6: Admin - Add Form

The screenshot shows a web browser window titled 'ADMIN (RECORD ADD) - Windows Internet Explorer'. The address bar displays the URL: `http://localhost/Project/v5vpt_bom_add.php?PartList=UBV_partslist&vpt_dbname=db_UBV&attach_dir=UBV_attach&img_dir=UBV_img`. The main content area features a form titled 'VISUAL PRODUCT TREE' with a sub-header '--- RECORD ADD ---'. The form includes the following fields and buttons:

- PART NO:**
- DESCRIPTION:**
- PDF FILE:**
- 3D MODEL FILE:**
- GIF FILE:**
- JPG FILE:**
- RESET**

Once the Add Form is submitted, confirmation window will be displayed with the following information, refer to [Figure 7: Admin - Add Confirmation](#) on page 10.

- File uploaded successfully or not (for PDF, 3D Model, GIF or JPG file)
- Part No and Part Description
- File name of PDF documentation, if documentation was submitted
- File name of 3D Model, if model was submitted
- Thumbnail image of part, if GIF image was submitted
- Larger image of part, if JPG image was submitted

Click on the Close Window link and part will be added to the Parts List as shown in [Figure 8: Admin - Part Added](#) on page 11.


Figure 7: Admin - Add Confirmation

The screenshot shows a web browser window titled "ADMIN (RECORD ADD) - Windows Internet Explorer". The address bar displays "http://localhost/Project/v5vpt_bom_add.php". The main content area is titled "VISUAL PRODUCT TREE" and features a confirmation message: "--- RECORD ADDED ---". Below this, a status bar indicates "PDF File Uploaded! | GIF File Uploaded! | JPG File Uploaded!". A table lists the following details:

PART NO :	UBV-00
DESCRIPTION :	Union Ball Valve Assembly
DOCUMENTATION :	UBV-00-0000.pdf
3D MODEL :	No Model

To the right of the table is a small thumbnail image of the 3D model. Below the table is a link: "--- [CLOSE WINDOW](#) ---". The main area below contains a large 3D model of the Union Ball Valve Assembly, showing various components in yellow, teal, red, and grey. The browser's status bar at the bottom shows "Done", "Internet | Protected Mode: Off", and zoom levels of "100%".

 Figure 8: Admin - Part Added

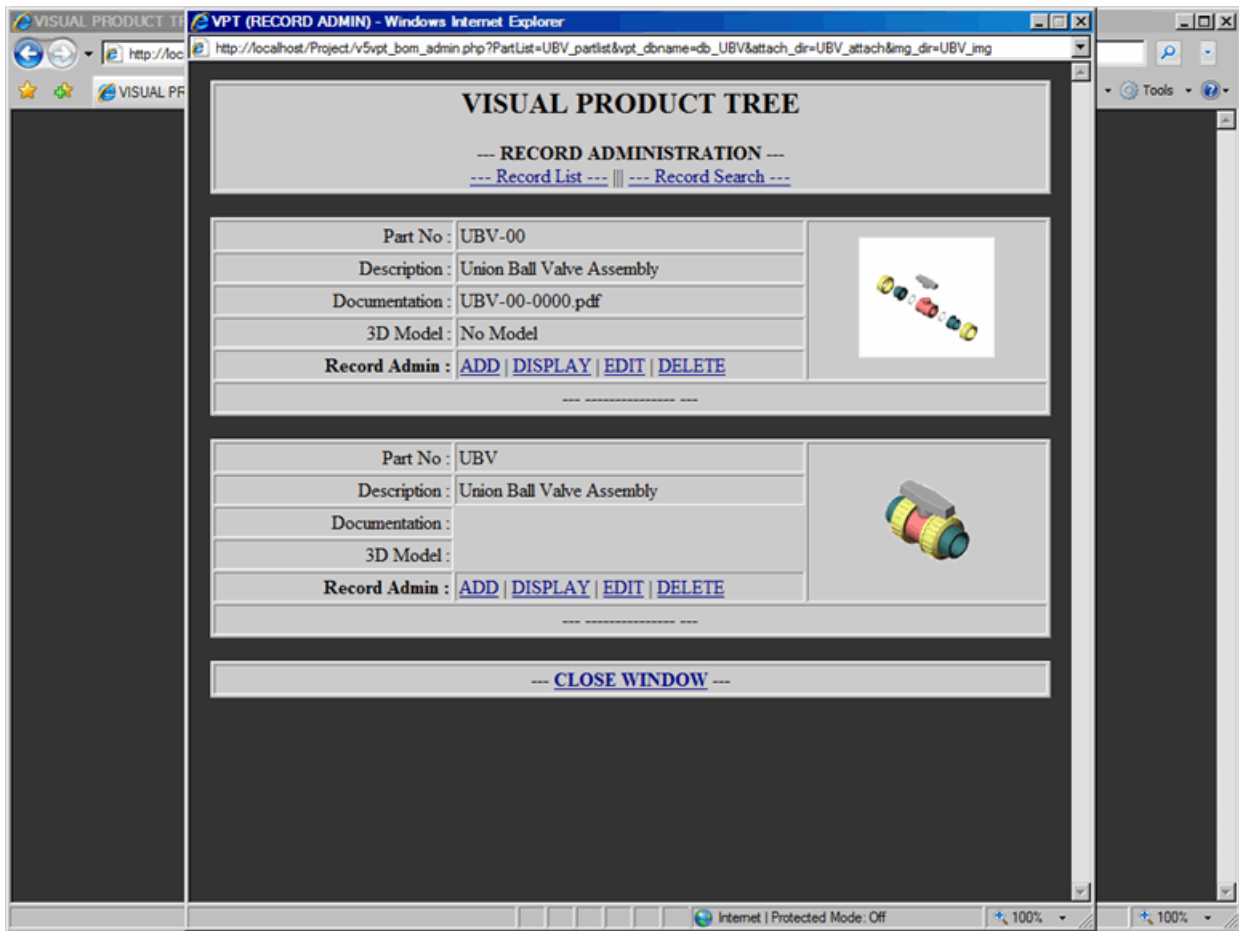

Parts List - Edit Parts

This document describes how to edit parts to Parts List

In order to edit part to the Parts List, proceed with the following steps:

1. From the Record Administration window, click on Edit link, which will display Record Edit Form, as shown in *Figure 9: Admin - Edit Form* on page 12. Note that in the Record Edit Form, all the current information regarding the part has been displayed.
2. To change part number, type in new part number in the Part No text box
3. To change part description, type in new description in the Part Description text box.
4. Provide new PDF File, if PDF documentation has changed.
5. Provide new 3D Model File, if CAD 3D Model has changed.
6. Provide new GIF image, if thumbnail image has changed.
7. Provide new JPG image, if main image has changed.
8. Submit the form to process your request to edit part.



Note: In Record Edit Form, if you enter Part No that already exists in the Parts List, you will get an error message and process will be terminated.



Note: GIF images are 100x100 pixels and JPG images are 450x375 pixels. GIF and JPG images can be added later. However, if you do not provide images, you will get an error message in the Form Confirmation window.

Figure 9: Admin - Edit Form

The screenshot shows a web browser window titled "ADMIN (RECORD EDIT) - Windows Internet Explorer". The address bar shows a URL: "http://localhost/Project/v5vpt_bom_edit.php?partlist_id=2&PartList=UBV_partlist&vpt_dbname=db_UBV&attach_dir=UBV_attach&img_dir=UBV_img". The main content area displays a form titled "VISUAL PRODUCT TREE" with a sub-header "--- RECORD EDIT ---". The form contains the following fields and buttons:

- PART NO:** Input field containing "UBV-00-0000".
- DESCRIPTION:** Input field containing "Union Ball Valve Assembly (Exploded View)".
- PDF FILE:** Input field containing "Current PDF: UBV-00-0000.pdf" and a "Browse..." button.
- 3D MODEL FILE:** Input field containing "Current 3D: No Model" and a "Browse..." button.
- GIF FILE:** Input field containing "Current GIF: UBV-00-0000.gif" and a "Browse..." button.
- JPG FILE:** Input field containing "Current JPG: UBV-00-0000.jpg" and a "Browse..." button.
- RESET** and **SUBMIT** buttons at the bottom.

Once the Edit Form is submitted, confirmation window will be displayed with the following information, refer to [Figure 10: Admin - Edit Confirmation](#) on page 13.

- File uploaded successfully or not (for PDF, 3D Model, GIF or JPG file)
- Updated Part No and Part Description
- Updated file name of PDF documentation, if documentation was submitted
- Updated file name of 3D Model, if model was submitted
- Updated thumbnail image of part, if GIF image was submitted
- Updated larger image of part, if JPG image was submitted

Click on the Close Window link and part will be edited to the Parts List as shown in [Figure 11: Admin - Part Edited](#) on page 14.


Figure 10: Admin - Edit Confirmation

The screenshot displays a web browser window titled "ADMIN (RECORD EDIT) - Windows Internet Explorer". The address bar shows the URL "http://localhost/Project/v5vpt_bom_edit.php". The main content area is titled "VISUAL PRODUCT TREE" and contains a "RECORD EDITED" status. Below this is a table with the following data:

PART NO :	UBV-00-0000
DESCRIPTION :	Union Ball Valve Assembly (Exploded View)
DOCUMENTATION :	UBV-00-0000.pdf
3D MODEL :	No Model

To the right of the table is a small thumbnail image of the 3D exploded view. Below the table is a "CLOSE WINDOW" button. The main area below the table shows a large 3D exploded view of the Union Ball Valve Assembly, consisting of several colored components (yellow, teal, red, grey) arranged in an exploded state. The browser's status bar at the bottom shows "Done", "Internet | Protected Mode: Off", and "100%" zoom level.

 Figure 11: Admin - Part Edited

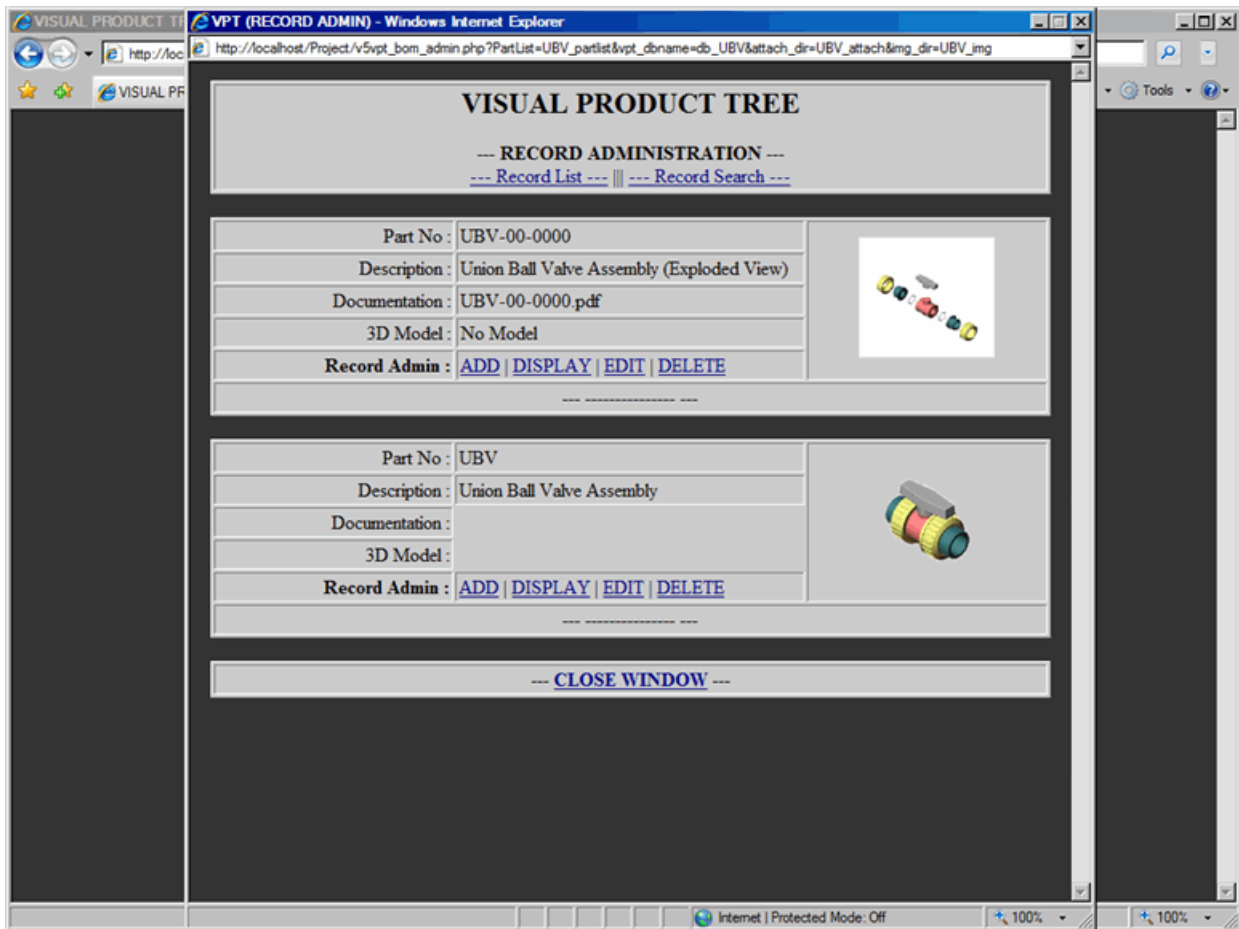

Parts List - Delete Parts

This document describes how to delete parts from Parts List


In order to delete part from the Parts List, proceed with the following steps:

1. From the Record Administration window, click on Delete link; which will display Record Delete Form, as shown in *Figure 12: Admin - Delete Form* on page 15. Note that in the Record Delete Form, all the current information regarding the part has been displayed.
2. Submit the form to process your request to delete part.



Note: If part that you are deleting is being used in the Builder part of the VPT application, then you will get an error message saying part can not be deleted. So first remove part from the Builder and then try to delete it from the Record Administration.

 Figure 12: Admin - Delete Form

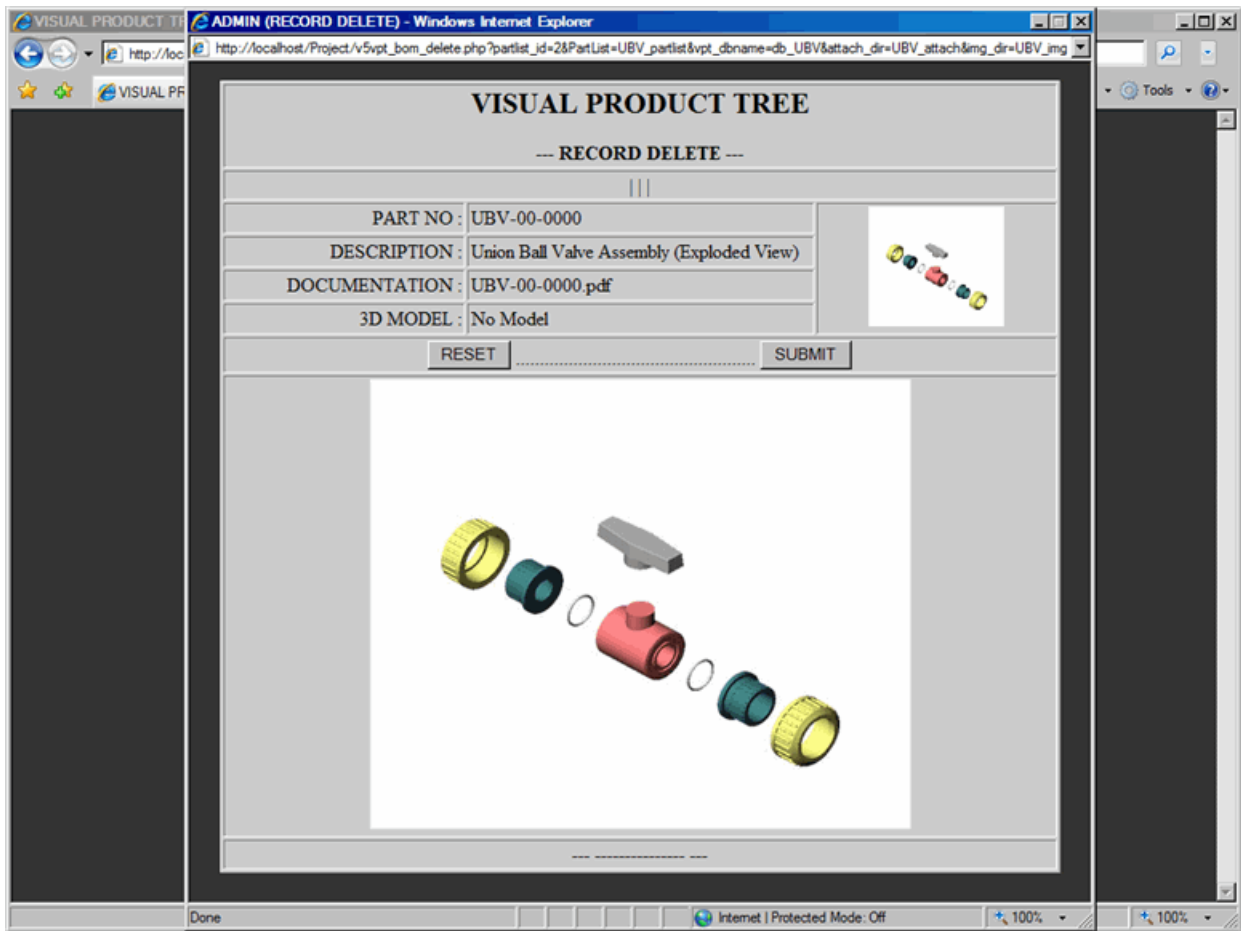

Once the Delete Form is submitted, confirmation window will be displayed stating part is deleted, as shown in [Figure 13: Admin - Delete Confirmation](#) on page 16.

Click on the Close Window link to return to Record Administration as shown in [Figure 14: Admin - Part Deleted](#) on page 17, notice that deleted part is removed from the Parts List.

Figure 13: Admin - Delete Confirmation


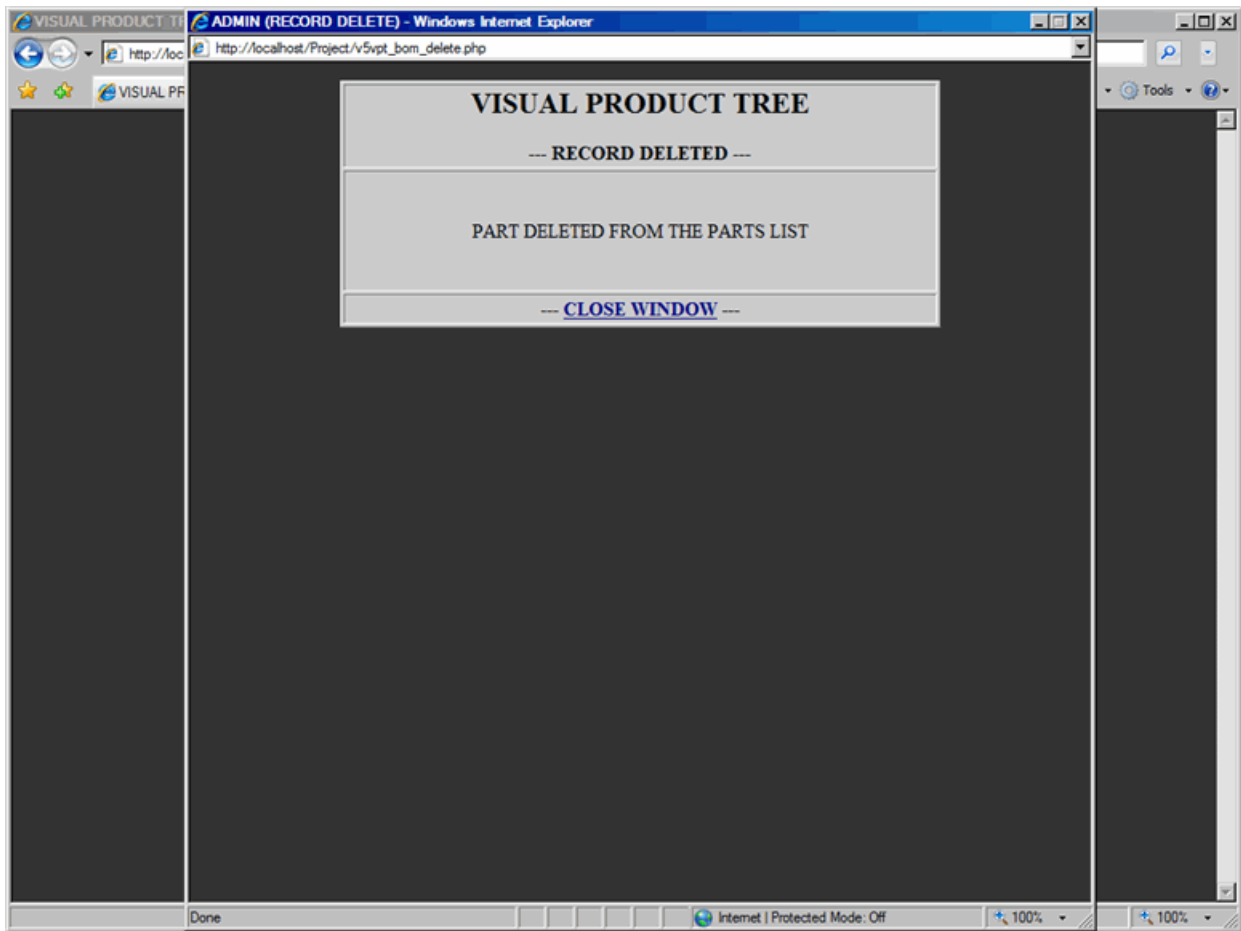 


Figure 14: Admin - Part Deleted

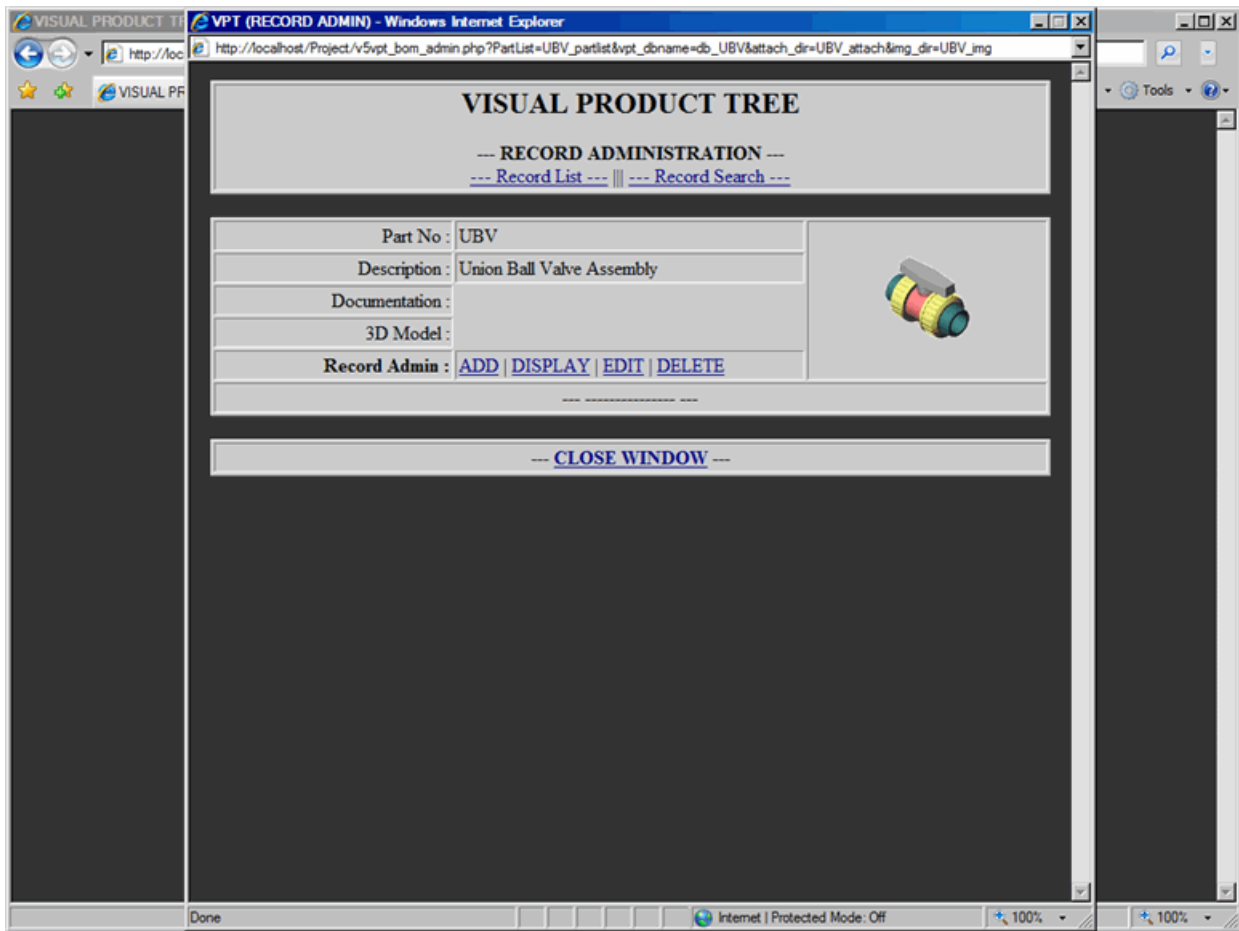 

Parts List - Display


This document describes how to display a part from Parts List

From the Record Administration window, click on Display link, which will display Record Display window with the following information, as shown in *Figure 15: Admin - Display Record* on page 18.

- Part No and Part Description
- File name of PDF documentation, if documentation is attached
- File name of 3D Model, if model is attached
- Thumbnail image of part, if GIF image is attached
- Larger image of part, if JPG image is attached

Click on the Close Window link to return to the Record Administration window.

 Figure 15: Admin - Display Record

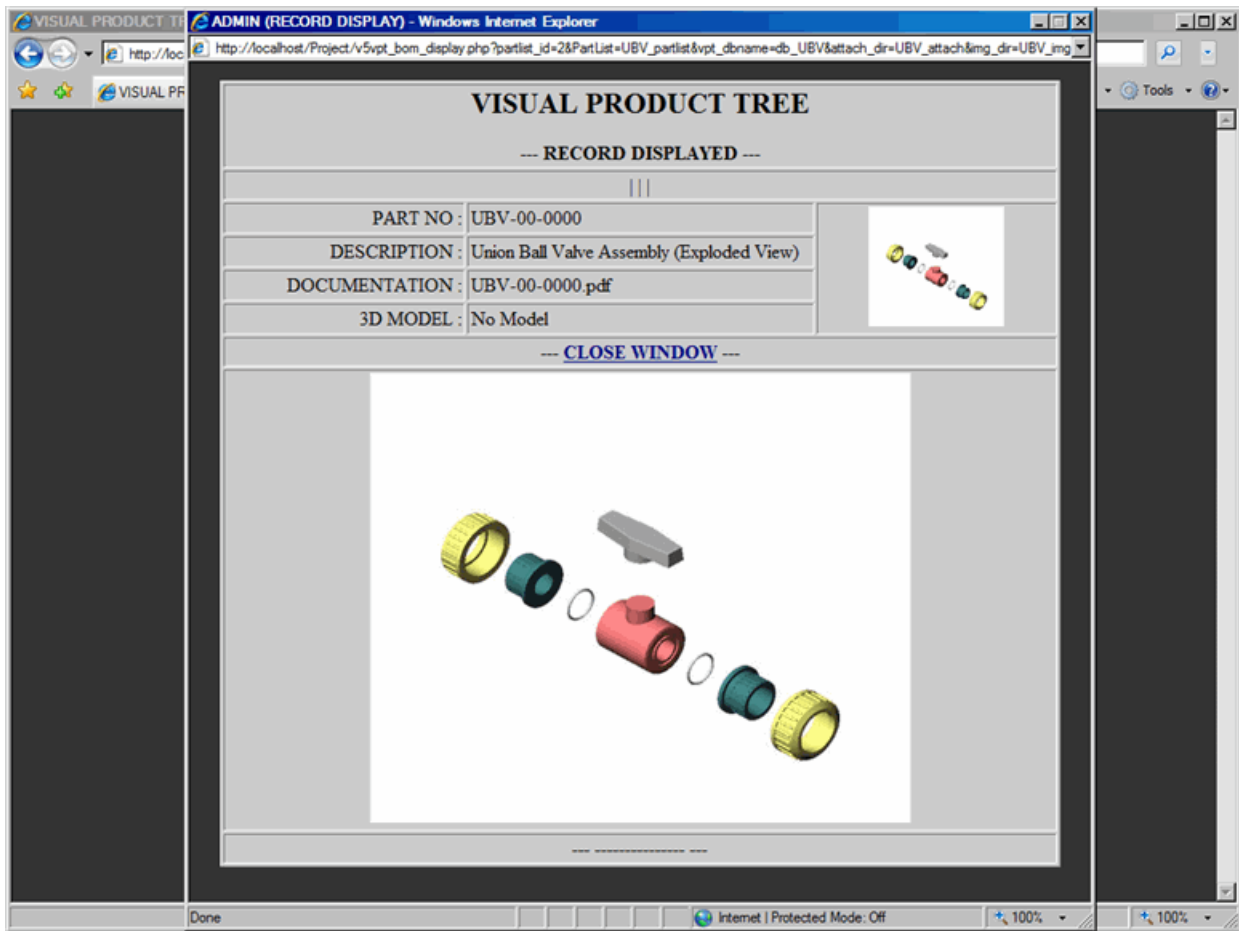

Parts List - List Parts

This document describes how to list parts from Parts List

From the Record Administration window, click on Record List link, which will display Record List window, refer to [Figure 16: Admin - Record List 1](#) on page 19, [Figure 17: Admin - Record List 2](#) on page 20 and [Figure 18: Admin - Record List 3](#) on page 21.


Record List displays three records per page. It also displays Navigation panel at the bottom of every page.


Navigation panel allows you to navigate to the next page, previous page, first page, last page or any specific page in the sequence.


From the Record List window, click on the Record Administration link to return to the Record Administration window.

Figure 16: Admin - Record List 1

VISUAL PRODUCT TREE
--- RECORD LIST ---

Part No :	UBV	
Description :	Union Ball Valve Assembly	
Documentation :		
3D Model :		
Record Admin :	Record Administration	

Part No :	UBV-00-0000	
Description :	Union Ball Valve Assembly (Exploded View)	
Documentation :	UBV-00-0000.pdf	
3D Model :	No Model	
Record Admin :	Record Administration	

Part No :	UBV-00-1111	
Description :	Body	
Documentation :	No PDF	
3D Model :	No Model	
Record Admin :	Record Administration	

1 2 3 [>] [>>>]

Figure 17: Admin - Record List 2

The screenshot displays a web browser window titled 'ADMIN (RECORD LIST) - Windows Internet Explorer'. The address bar shows a URL: `http://localhost/Project/v5vpt_bom_list.php?page=2%20%20%20&PartList=UBV_partlist&vpt_dbname=db_UBV&attach_dir=UBV_attach&img_dir=UBV`. The main content area is titled 'VISUAL PRODUCT TREE' and contains a 'RECORD LIST' section. The list consists of three entries, each with a table of details and a 3D model image.


VISUAL PRODUCT TREE	
--- RECORD LIST ---	
Part No :	UBV-00-2222
Description :	Handle
Documentation :	No PDF
3D Model :	No Model
Record Admin :	Record Administration

Part No :	UBV-00-3333
Description :	O-ring
Documentation :	No PDF
3D Model :	No Model
Record Admin :	Record Administration

Part No :	UBV-00-4444
Description :	Connector
Documentation :	No PDF
3D Model :	No Model
Record Admin :	Record Administration

[<<<] [<] 1 2 3 [>] [>>>]	

 Figure 18: Admin - Record List 3

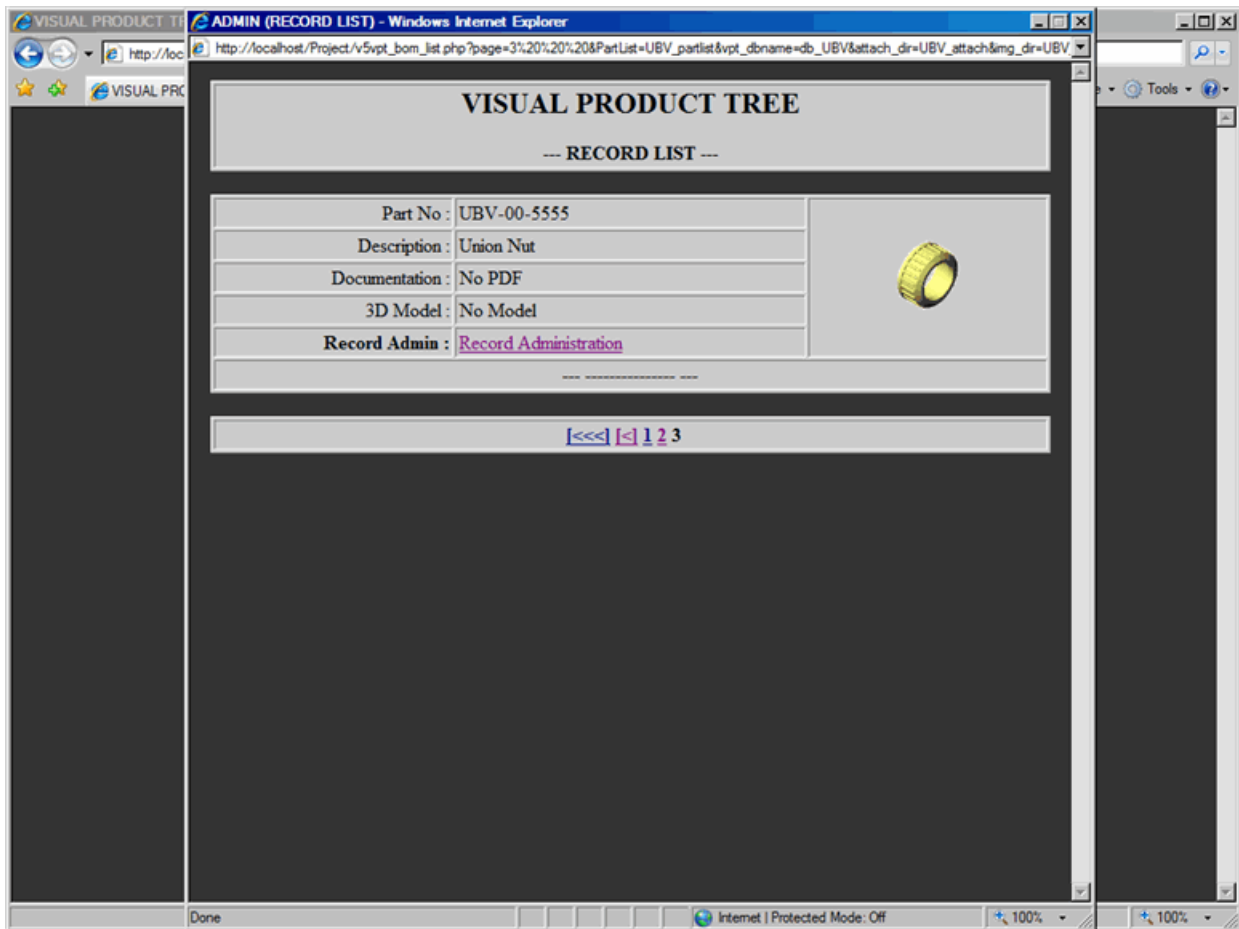

Parts List - Search Parts

This document describes how to search parts from Parts List

In order to search for parts into the Parts List, proceed with the following steps:

- From the Record Administration window, click on Record Search link, which will display Record Search window.
- To search by part number, enter Part No (or any descriptive number) in the text box.
- To search by part description, enter Part Description (or any descriptive word) in the text box.
- Click Go button to Submit the search criteria.
 - *Figure 19: Admin - Record Search 1* on page 22: Part No '00' and Part Description 'union' is entered for search; result is shown in *Figure 20: Admin - Record Search 2* on page 23.
 - *Figure 20: Admin - Record Search 2* on page 23: Part No is blank and Part Description 'union' is entered for search; result is shown in *Figure 21: Admin - Record Search 3* on page 24.


From the Record List window, click on the Record Administration link to return to the Record Administration window.


Figure 19: Admin - Record Search 1


VISUAL PRODUCT TREE

--- RECORD SEARCH ---

Part No: Part Desc:

Part No :	UBV-00-5555	
Description :	Union Nut	
Documentation :	No PDF	
3D Model :	No Model	
Record Admin :	Record Administration	

Part No :	UBV-00-4444	
Description :	Connector	
Documentation :	No PDF	
3D Model :	No Model	
Record Admin :	Record Administration	

Part No :	UBV-00-3333	
Description :	O-ring	
Documentation :	No PDF	
3D Model :	No Model	
Record Admin :	Record Administration	

Internet | Protected Mode: Off 100% 100%

Figure 20: Admin - Record Search 2


The screenshot shows a web browser window titled "ADMIN (RECORD SEARCH) - Windows Internet Explorer". The address bar shows "http://localhost/Project/v5vpt_bom_search.php". The main content area is titled "VISUAL PRODUCT TREE" and "--- RECORD SEARCH ---". Below the title is a search form with "Part No:" and "Part Desc: union" fields, and a "GO" button. The search results are displayed in two rows, each with a table of metadata and a 3D model image.


Part No.	Description	Documentation	3D Model	Record Admin
UBV-00-0000	Union Ball Valve Assembly (Exploded View)	UBV-00-0000.pdf	No Model	Record Administration
UBV-00-5555	Union Nut	No PDF	No Model	Record Administration


Figure 21: Admin - Record Search 3

VISUAL PRODUCT TREE
--- RECORD SEARCH ---

Part No: Part Desc: GO

Part No :	UBV	
Description :	Union Ball Valve Assembly	
Documentation :		
3D Model :		
Record Admin :	Record Administration	

Part No :	UBV-00-0000	
Description :	Union Ball Valve Assembly (Exploded View)	
Documentation :	UBV-00-0000.pdf	
3D Model :	No Model	
Record Admin :	Record Administration	

Part No :	UBV-00-5555	
Description :	Union Nut	
Documentation :	No PDF	
3D Model :	No Model	
Record Admin :	Record Administration	

Internet | Protected Mode: Off 100% 100%

VPT_Builder

Builder - Introduction

This document describes introduction to Builder

Once the new Visual Product Tree is added to the Table Of Content (TOC) and all the parts are added to the Parts List (Record Administration); Builder is the second process in building of the Visual Product Tree. This is where you actually build a drill-down structure of the product; starting from top level assembly to sub-assemblies to components.

From the TOC, click on Builder link, which will display Builder window. By default, top level assembly is already shown in the Builder when Visual Product Tree was created in the TOC.

Builder window has six major aspects as described below, refer to [Figure 22: Builder Introduction 1](#) on page 26, [Figure 23: Builder Introduction 2](#) on page 27 and [Figure 24: Builder Introduction 3](#) on page 28:

1. Navigation Trail: As you create the drill-down structure of the Visual Product Tree from top level assembly to the bottom level of components; Navigation trail will be created for each level. Navigation trail is an easy way to move (or jump) backward to any specific level in the assembly.
2. Part No: As you navigate from top level assembly to the bottom level of components; Part No will change accordingly.
3. Sub-components Area:
 - Listing of all the components that belongs to the specified assembly or sub-assembly
 - Part No of the listed components as a link, clicking on the Part No will direct you to that specific sub-assembly (or component), in the preceding window.
 - If sub-components have attachments such as PDF documentation or 3D Model, links will be displayed next to the Part No
 - Part Description of the listed components
 - Add components into the specified assembly or sub-assembly
 - Delete components from the specified assembly or sub-assembly
4. Rollover Area:
 - Listing of all the rollover that belongs to sub-components in the assembly or sub-assembly
 - Unique Rollover ID for each rollover, since single component can have multiple rollovers
 - Add rollover for the sub-components of the specified assembly or sub-assembly
 - Edit rollover for the sub-components of the specified assembly or sub-assembly
 - Delete rollover for the sub-components of the specified assembly or sub-assembly
5. Interactive Image Area:
 - Part Image: Visual presentation of the Part
 - Rollover Image Map:
 - Part image can be interactive with the Rollover Image Map
 - As you move mouse over sub-assembly (or component); rollover image will be displayed, if it has an Image Map
 - Clicking on the Image Map area will direct you to that specific sub-assembly (or component), in the preceding window.
6. Close Window Link: Use this link to close the browser window. Do not close the window by clicking on 'X' of the window.

Figure 22: Builder Introduction 1

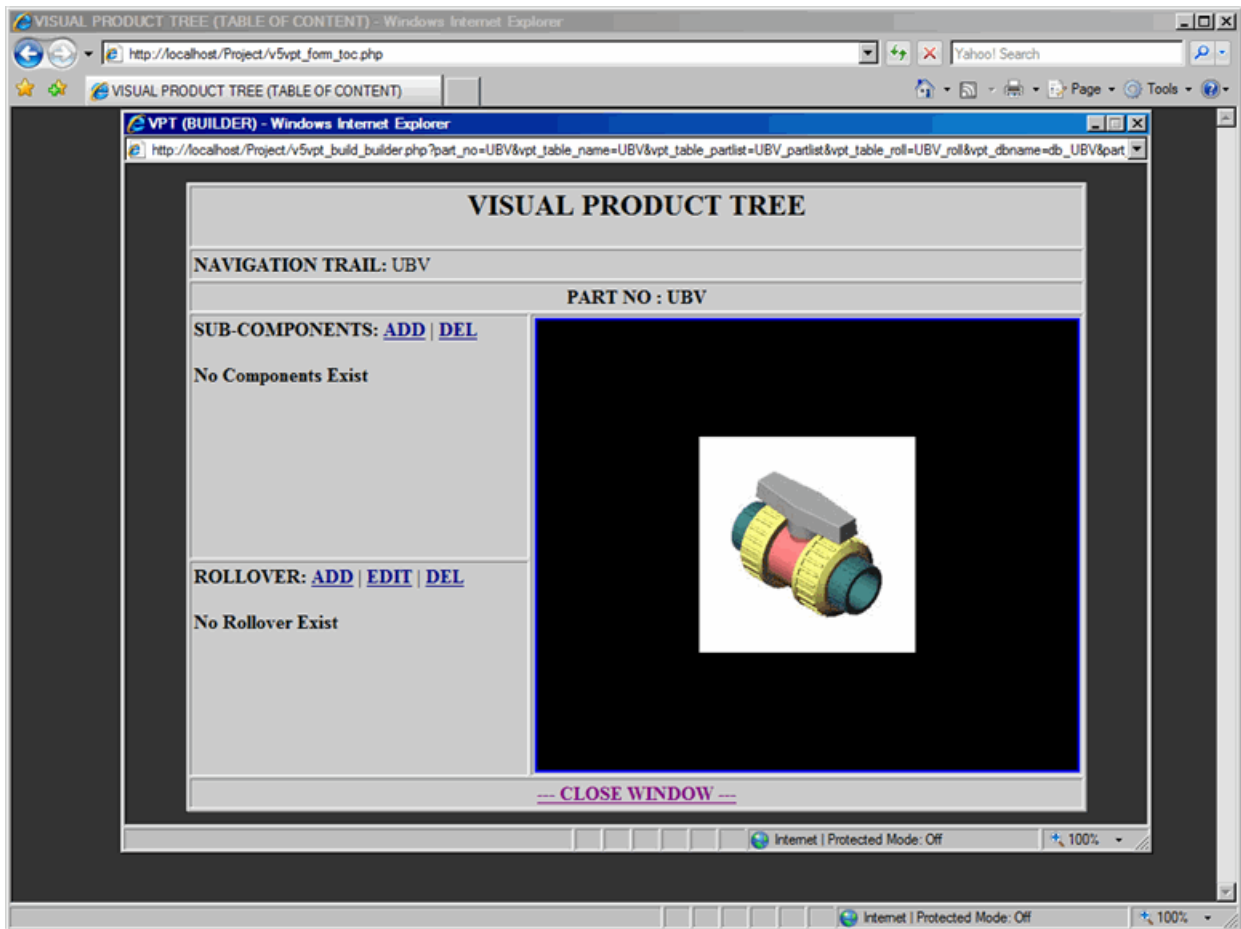 


Figure 23: Builder Introduction 2


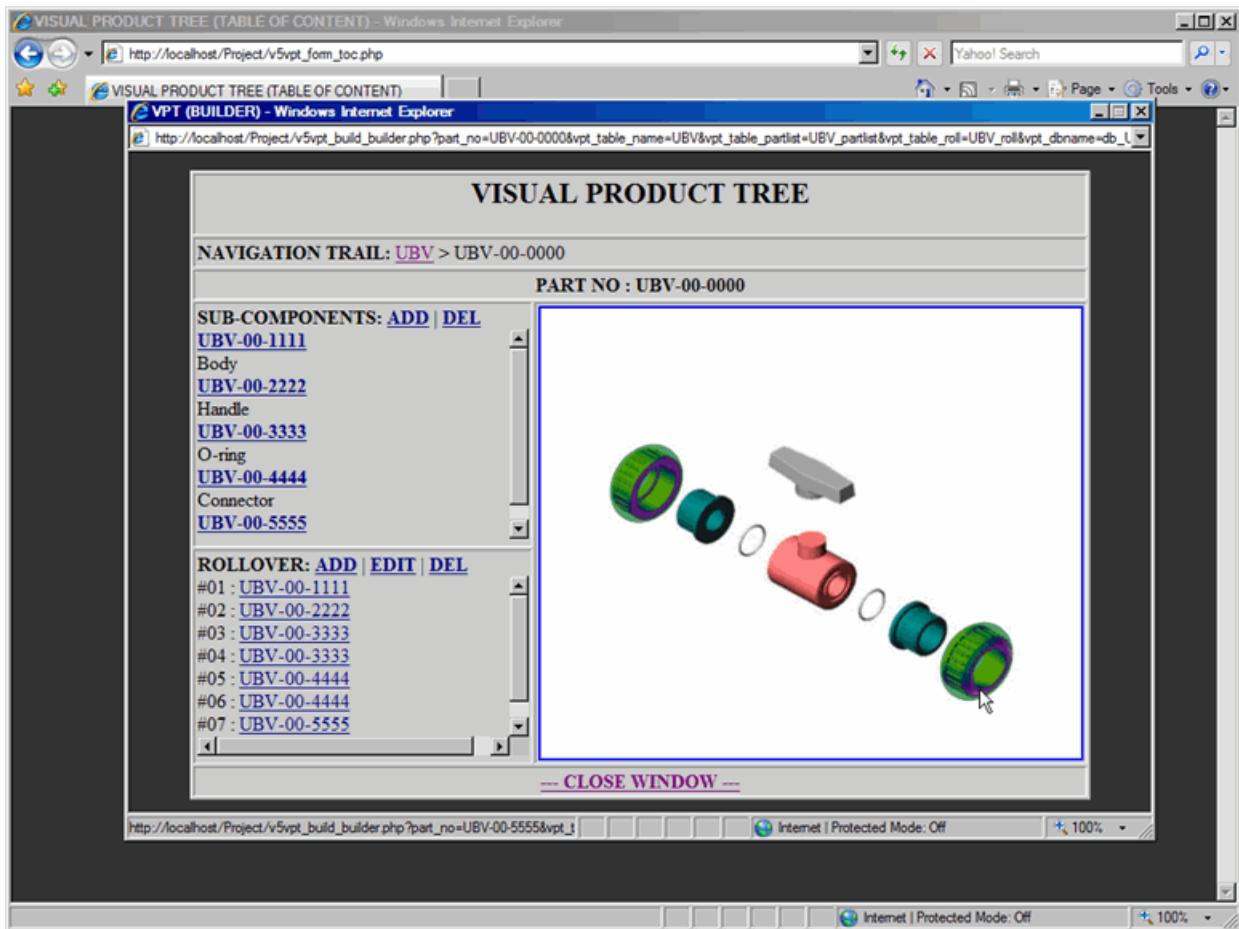 


Figure 24: Builder Introduction 3

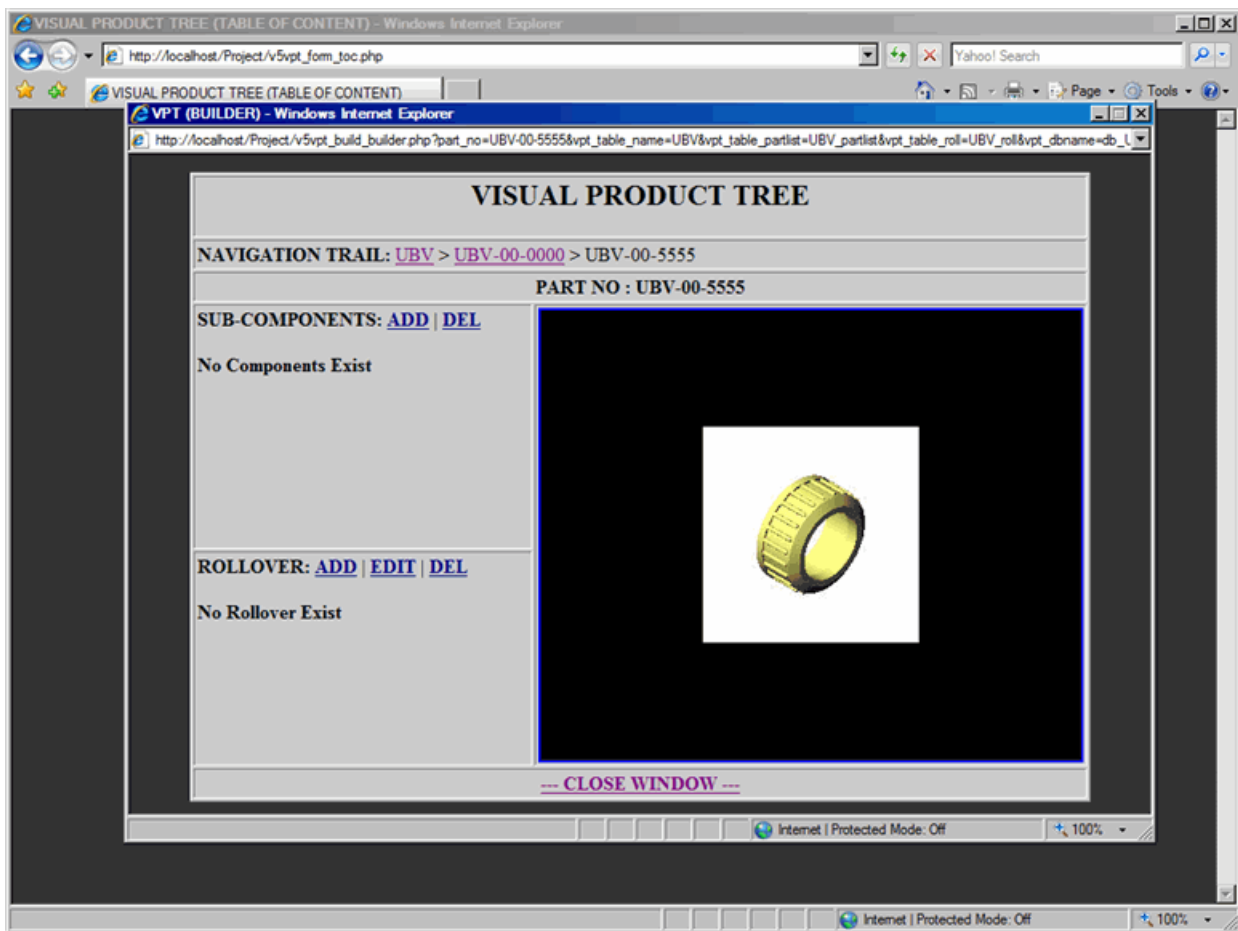 

Builder - Add

This document describes how to add parts to Builder

When you add components into the Builder, you are actually creating drill-down structure of the Visual Product Tree. First we added all the parts into the Parts List; now we simply select those parts and add it into the Builder in order to create drill-down of the Visual Product Tree.

In order to add components to the Builder, proceed with the following steps:

1. In the Builder window, from the Sub-Component area, click on Add link; which will display Add Component dialog box, as shown in *Figure 25: Builder - Add Form* on page 29. Note that you are adding sub-components to the top level of assembly (Part No. UBV).
2. Select a component UBV-00-0000 from the drop-down list to add it to the builder.
3. Submit the form to process your request to add component to the UBV Assembly.




Note: Adding components into the Builder or Deleting components from the Builder does not affect those components into the Parts List.



Note: If Sub-Component area is empty, then you will not be able to Delete component or modify any Rollover related information.

 Figure 25: Builder - Add Form

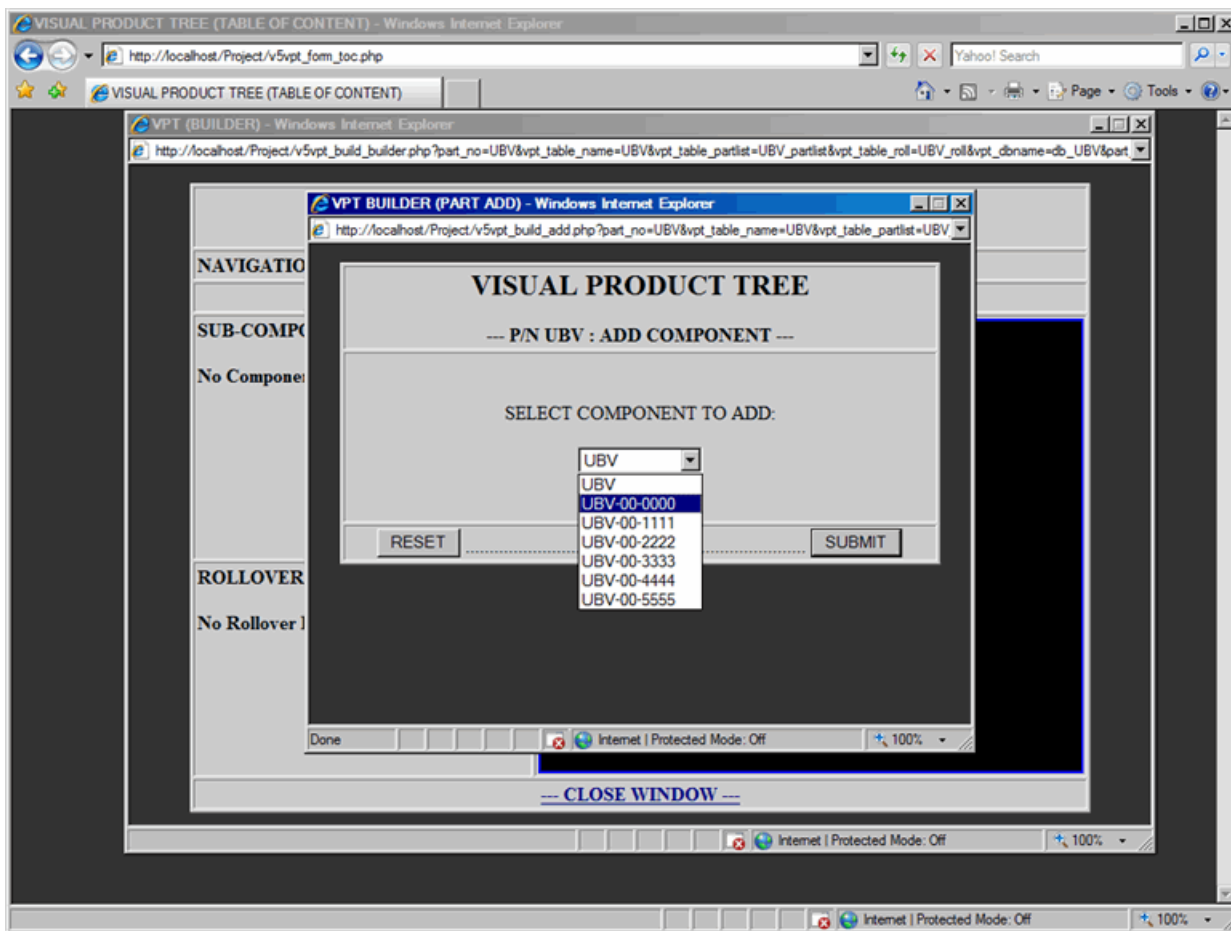

Once the Add Component Form is submitted, confirmation window will be displayed as shown in [Figure 26: Builder - Add Confirmation](#) on page 30.

Click on the Close Window link and component (UBV-00-0000) will be added to the top level assembly (UBV) as shown in [Figure 27: Builder - Part Added](#) on page 31. Also, note this component has PDF documentation attached to it as a link.

Figure 26: Builder - Add Confirmation


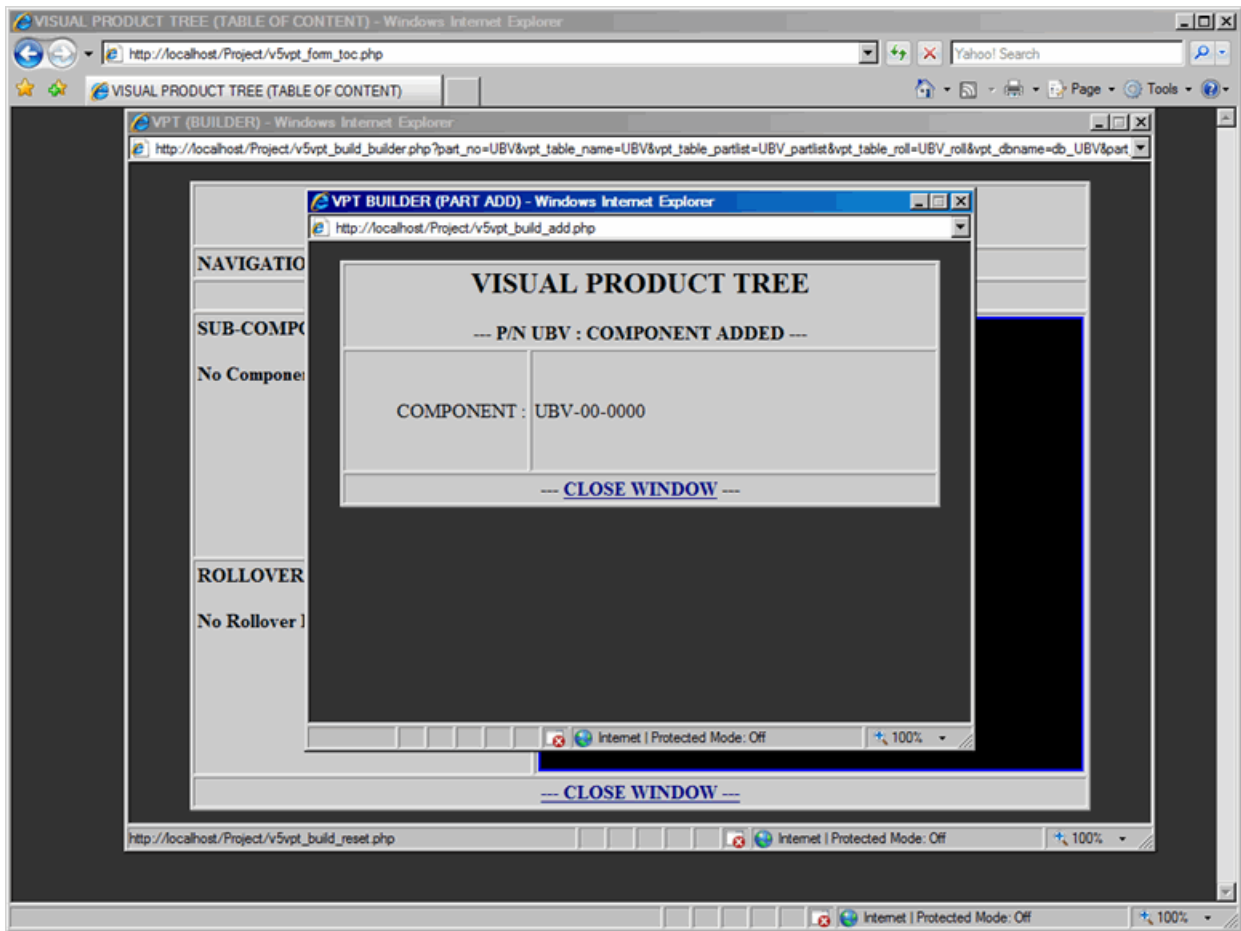 


Figure 27: Builder - Part Added

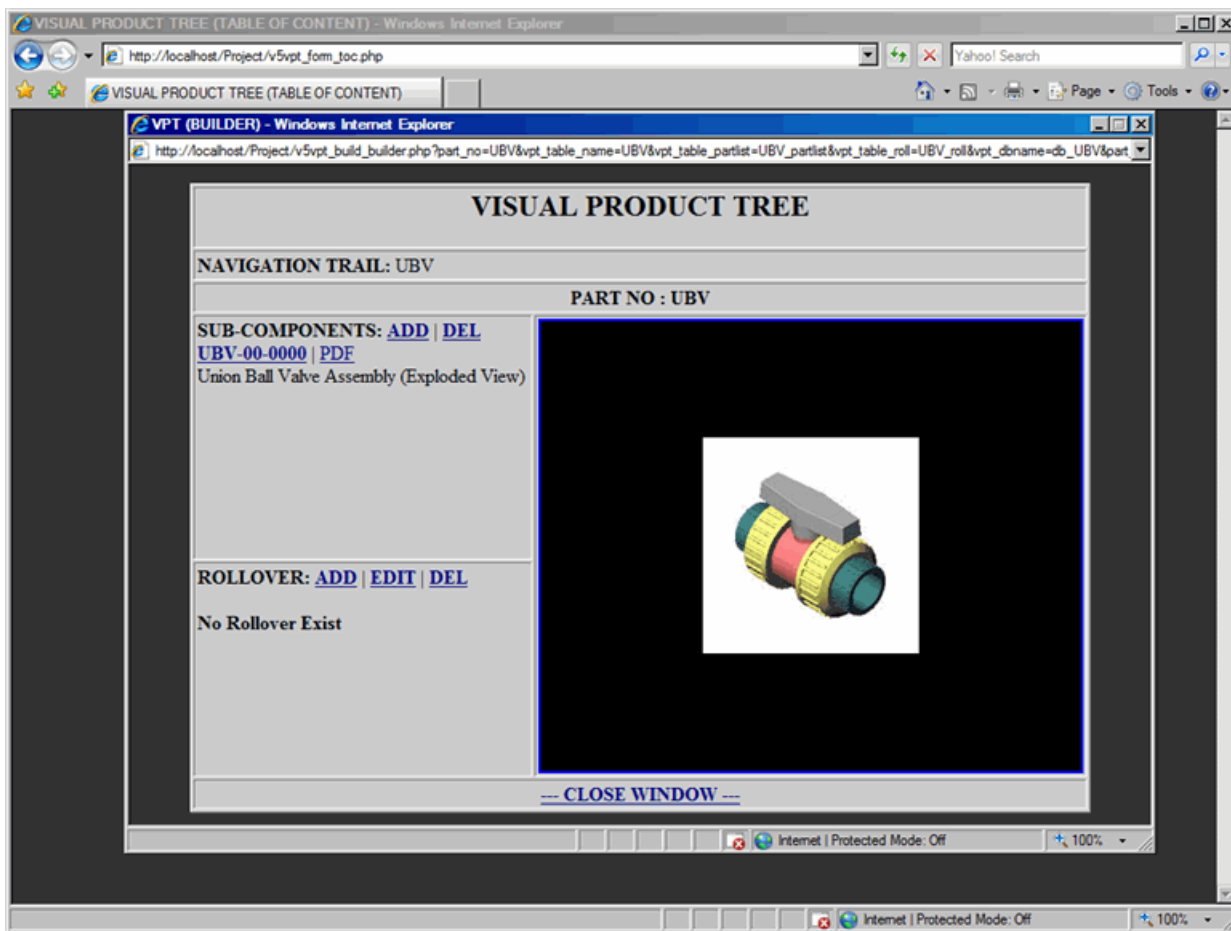 

Builder - Delete

This document describes how to delete parts from Builder

When you delete components from the Builder, you are actually removing it from the drill-down structure of the Visual Product Tree.


In order to delete component from the Builder, proceed with the following steps:

1. In the Builder window, from the Sub-Component area, click on Delete link; which will display Delete Component dialog box, as shown in *Figure 28: Builder - Delete Form* on page 32. Note that you are deleting sub-components from the top level of assembly (Part No. UBV).
2. Select a component UBV-00-0000 form the drop-down list to delete it from the builder.
3. Submit the form to process your request to delete component from the UBV Assembly.



Note: When component is deleted from the Sub-Component list, all the rollovers associated with the component are also deleted from the Rollover Area

 Figure 28: Builder - Delete Form

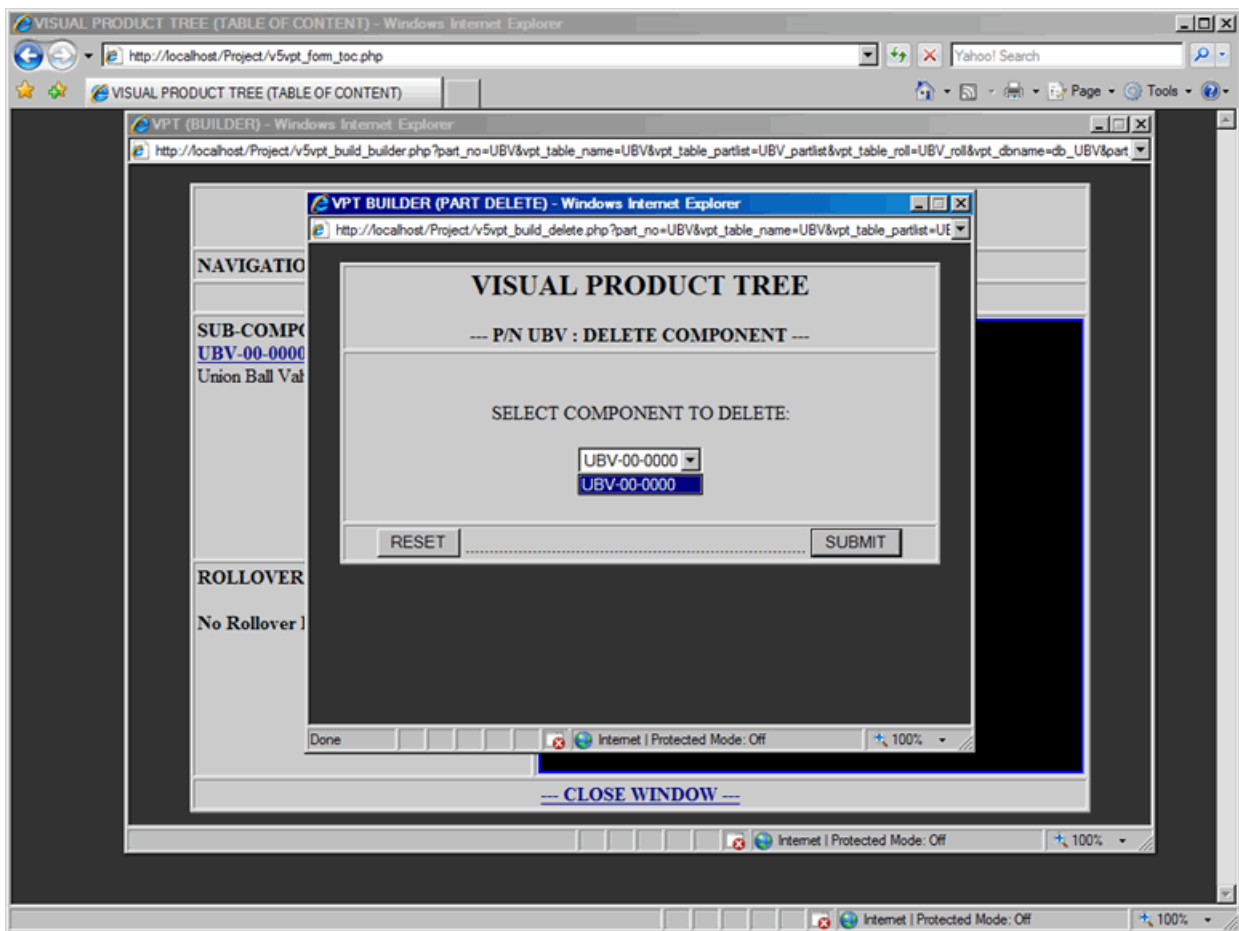

Once the Delete Form is submitted, confirmation window will be displayed as shown in [Figure 29: Builder - Delete Confirmation](#) on page 33.

Click on the Close Window link and component (UBV-00-0000) will be deleted from the top level assembly (UBV) as shown in [Figure 30: Builder - Part Deleted](#) on page 34.

Figure 29: Builder - Delete Confirmation


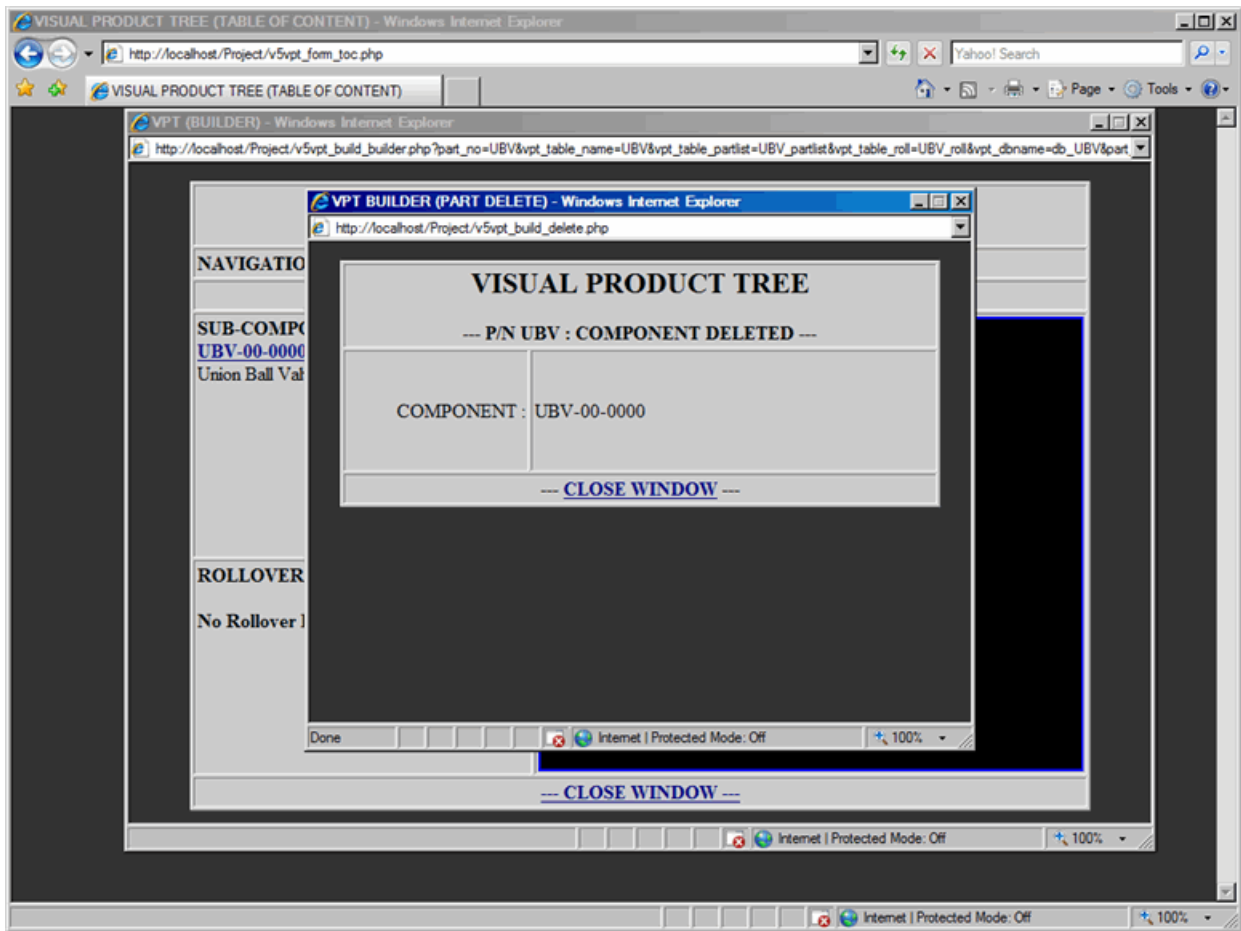 


Figure 30: Builder - Part Deleted

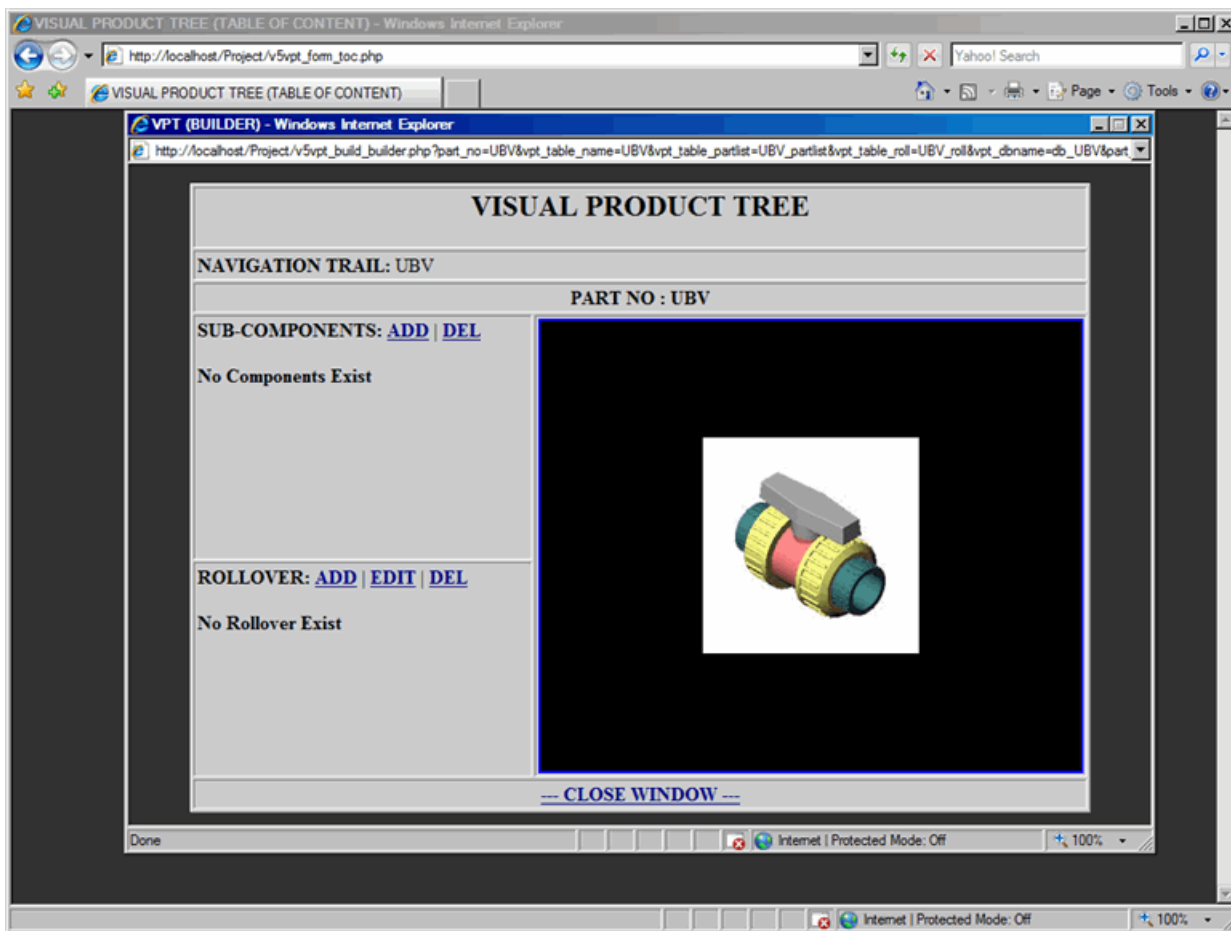 

Builder - Add Rollover

This document describes how to add rollover to parts in Builder

Rollovers are assigned to the components that have been added into the sub-component area of the Builder. After adding the rollover to the component, every time when mouse moves over the Part No, the rollover image will be displayed in the main image area. Also, rollovers can also be assigned by providing Image Map data. Once image map is assigned, every time when mouse moves over certain part of the image, the main image is replaced with the rollover image.


In order to add rollover to the component, proceed with the following steps:

1. In the Builder window, from the Rollover area, click on Add link; which will display Add Rollover dialog box, as shown in *Figure 31: Builder - Rollover Add Form* on page 35.
2. From Select Component drop-down list, select a component to apply rollover.
3. From the Shape drop-down list, select the shape of rollover.
4. In Image Map text box, add Image Map data for the rollover.
5. In Rollover File, provide a rollover image.
6. Submit the form to process your request to add rollover.



Note: Multiple rollovers can be added for the same component; However, each rollover can be identified by its unique Rollover ID number in the Rollover Area.

 Figure 31: Builder - Rollover Add Form

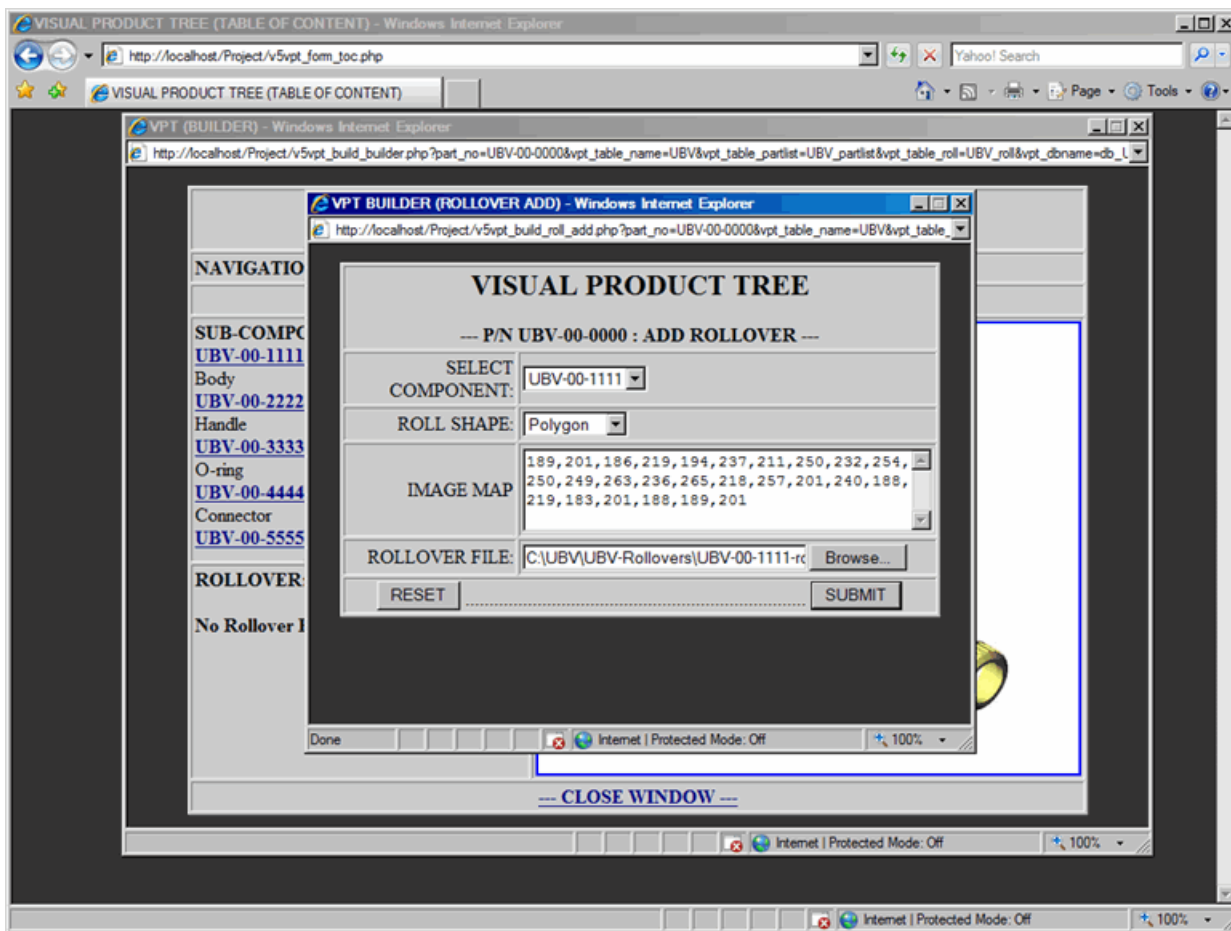

Once the Add Rollover Form is submitted, confirmation window will be displayed with the following information, refer to [Figure 32: Builder - Rollover Add Confirmation](#) on page 36.

- Rollover File uploaded successfully or not, if rollover image was submitted
- Part No of the component to which rollover was added
- The shape of the rollover, if shape was selected
- Image Map data of the rollover, if data were provided
- Rollover file name, if rollover image was submitted
- Submit the form to process your request to add rollover.

Click on the Close Window link and rollover will be added to the list as shown in [Figure 33: Builder - Rollover Added](#) on page 37.

Figure 32: Builder - Rollover Add Confirmation


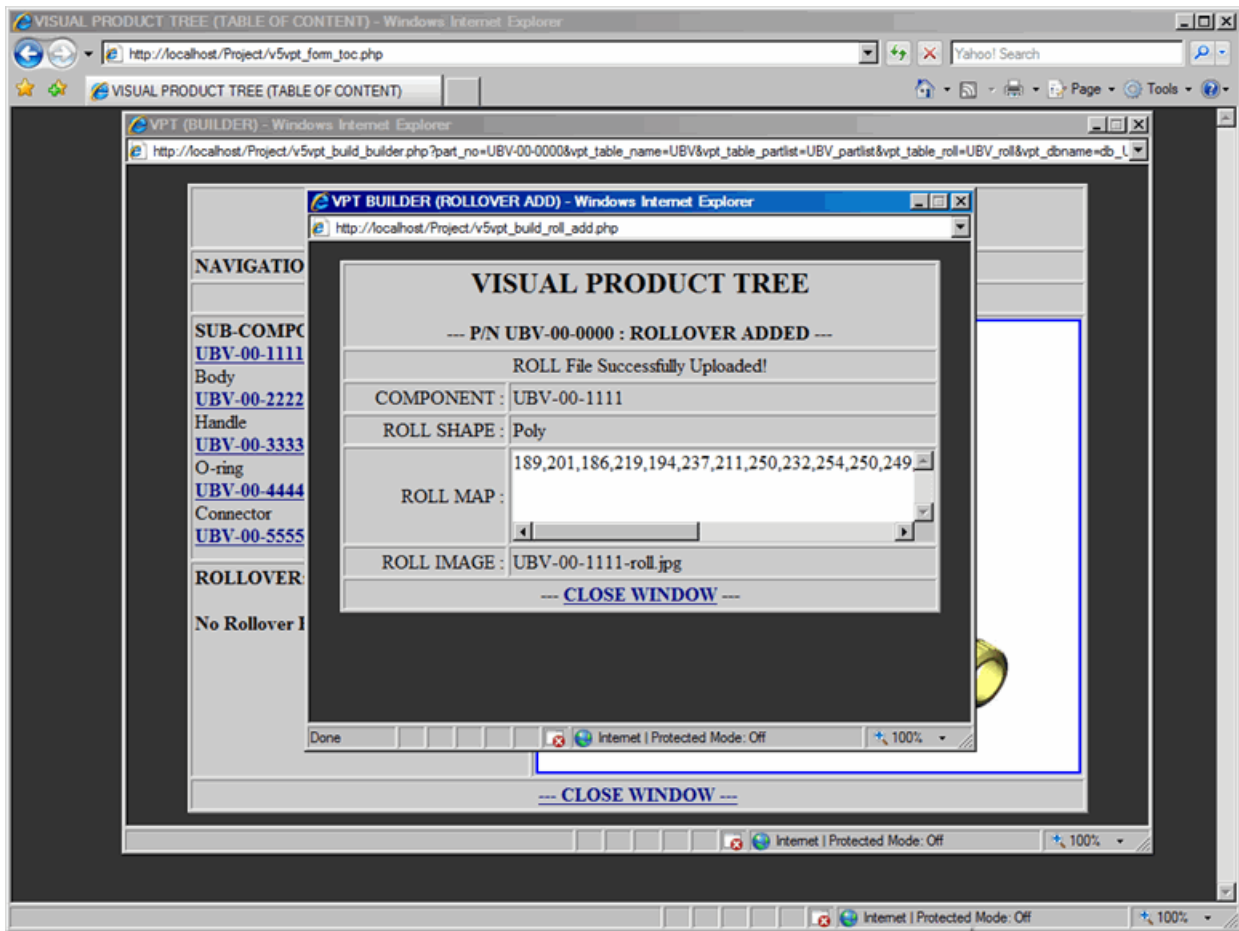 


Figure 33: Builder - Rollover Added

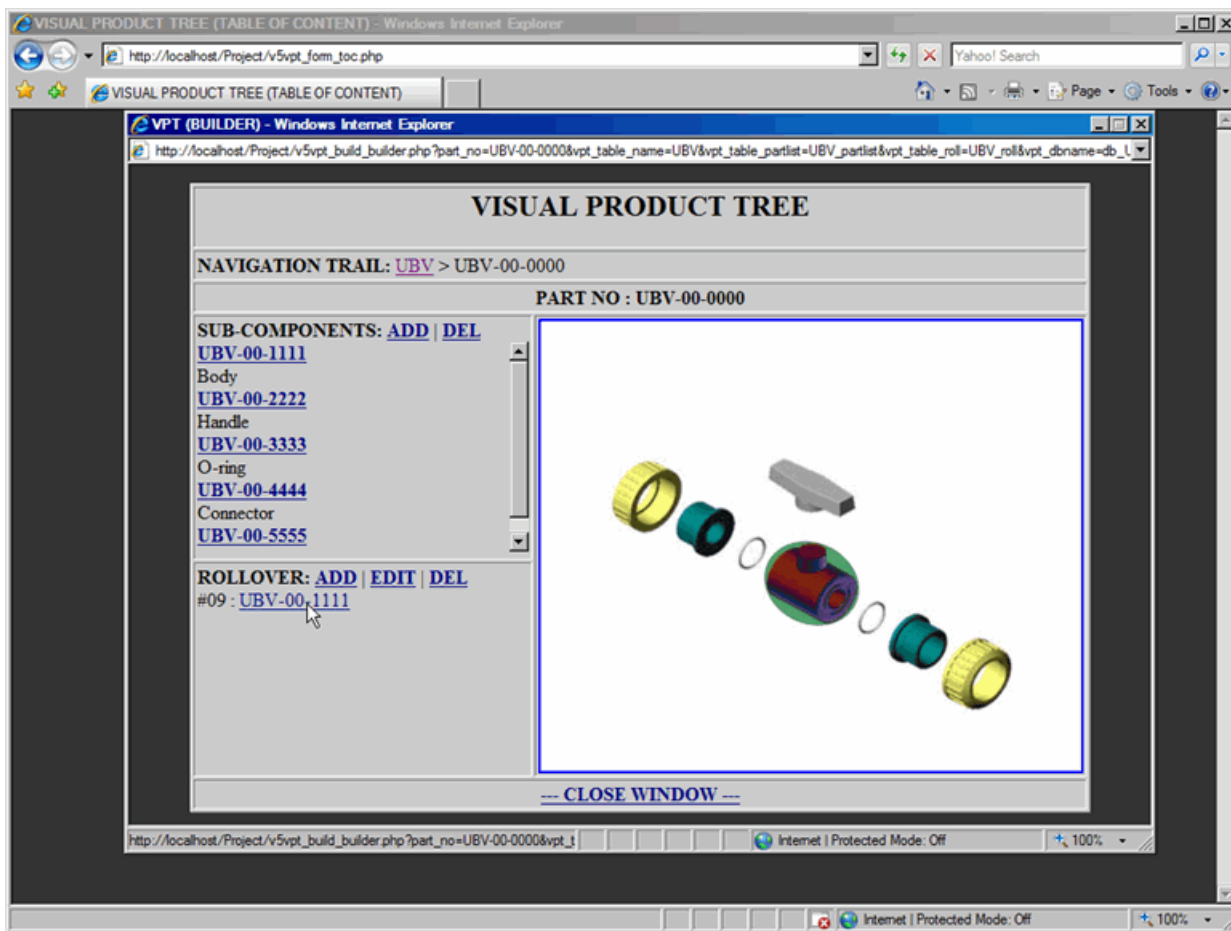 

Builder - Edit Rollover

This document describes how to edit rollover to parts in Builder

In order to edit rollover of any component, proceed with the following steps:

1. In the Builder window, from the Rollover area, click on Edit link; which will display Edit Rollover Component Selection dialog box, as shown in *Figure 34: Builder - Rollover Edit Form 1* on page 38 and *Figure 35: Builder - Rollover Edit Form 2* on page 39.
2. From Select Rollover to Edit drop-down list, select a component to edit rollover, then submit the form.
3. Next, Edit Rollover dialog box will be displayed with all the current information regarding the rollover.
4. Part No of selected component is displayed in grey as unselected.
5. From the Shape drop-down list, select the shape of rollover, if rollover shape has changed.
6. In Image Map text box, edit Image Map data for the rollover, if image map data has changed.
7. In Rollover File, provide a rollover image, if rollover image has changed.
8. Submit the form to process your request to edit rollover.



Note: Multiple rollovers can be shown for the same component; Therefore, each rollover can be identified by its unique Rollover ID number in the Rollover Area.

Figure 34: Builder - Rollover Edit Form 1


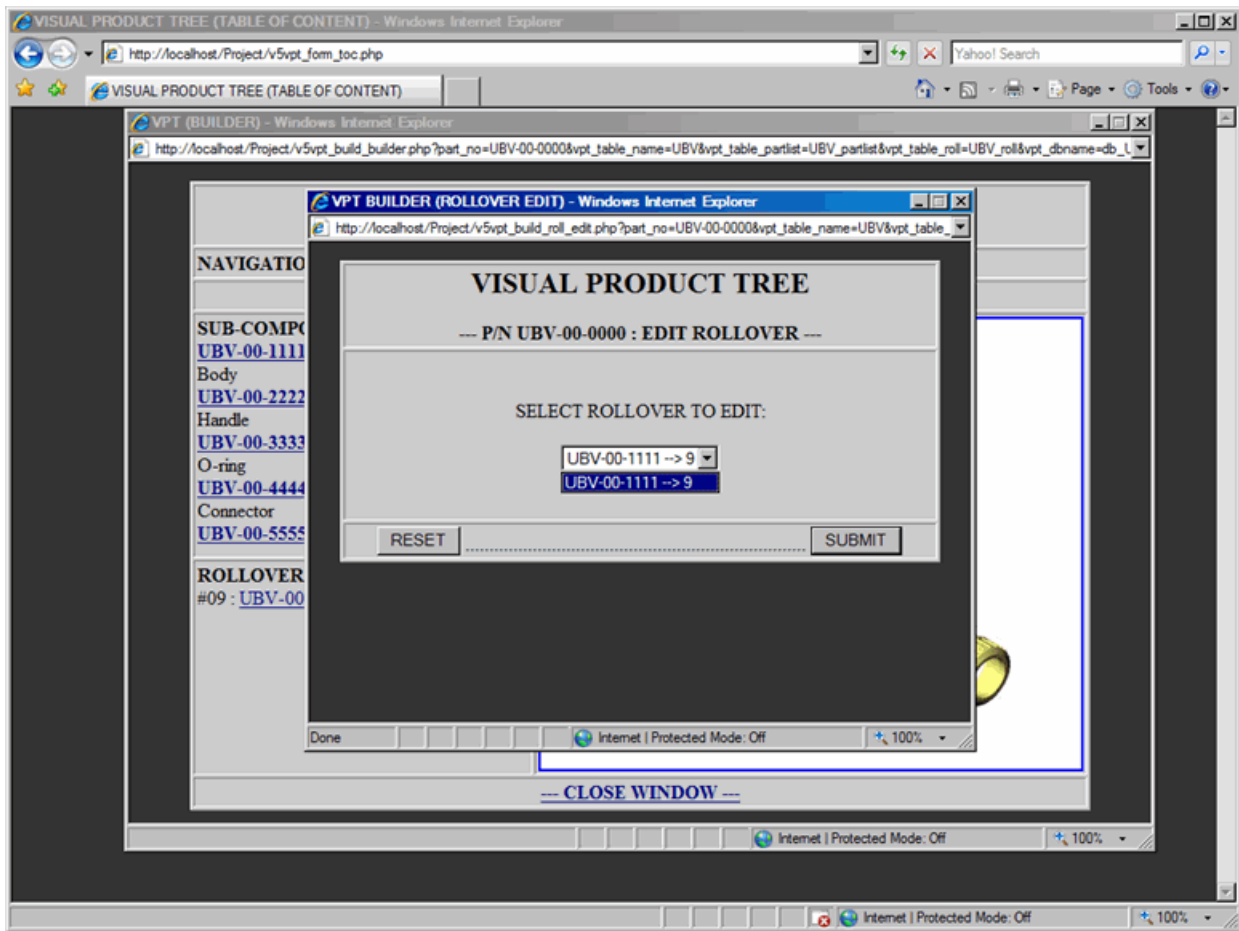 


Figure 35: Builder - Rollover Edit Form 2

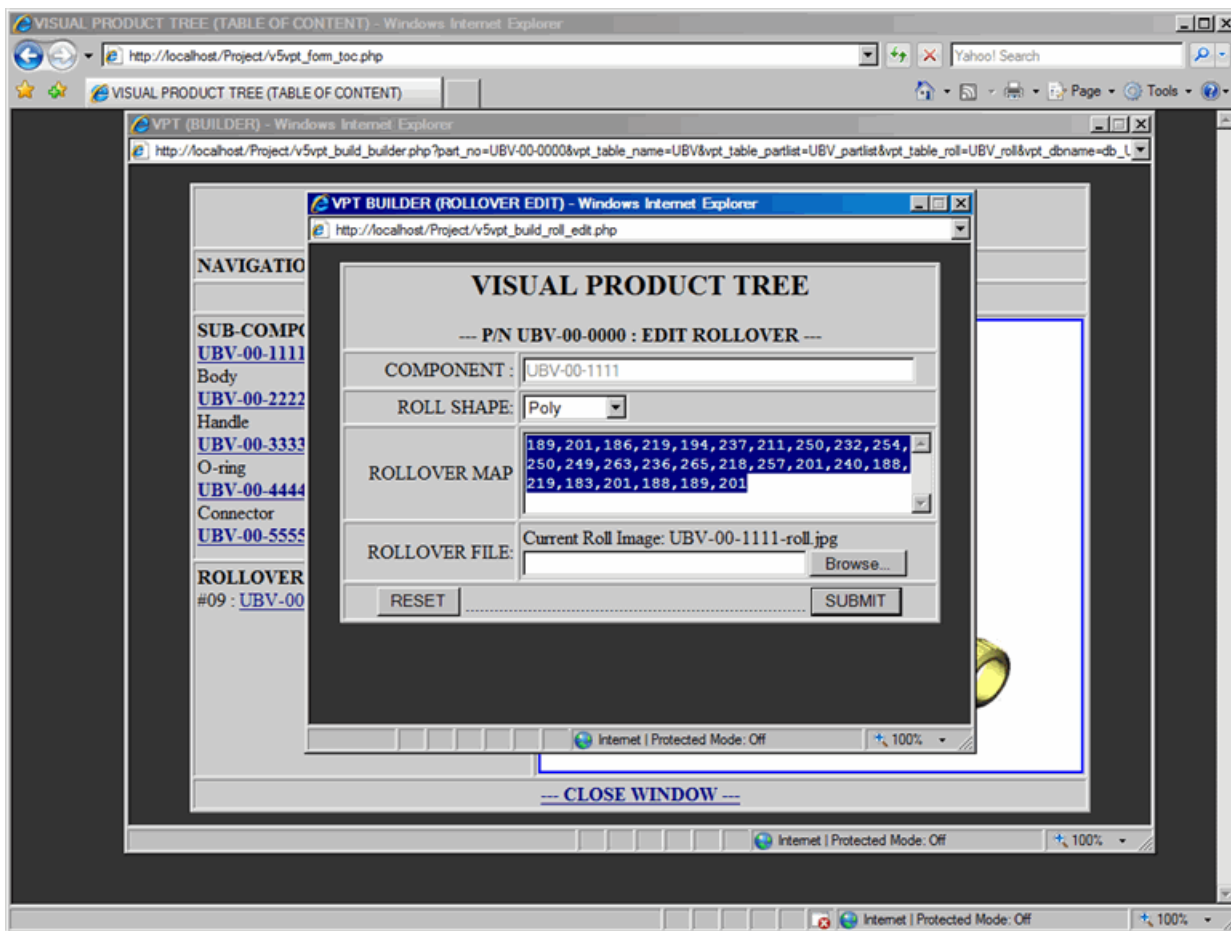 


Once the Edit Rollover Form is submitted, confirmation window will be displayed with the following information, refer to [Figure 36: Builder - Rollover Edit Confirmation](#) on page 40.

- Updated Rollover File uploaded successfully or not, if rollover image was submitted
- Part No of the component to which rollover was added
- Updated Shape of the rollover
- Updated Image Map data of the rollover
- Updated Rollover file name

Click on the Close Window link and rollover will be edited to the list as shown in [Figure 37: Builder - Rollover Edited](#) on page 41.

 
Figure 36: Builder - Rollover Edit Confirmation

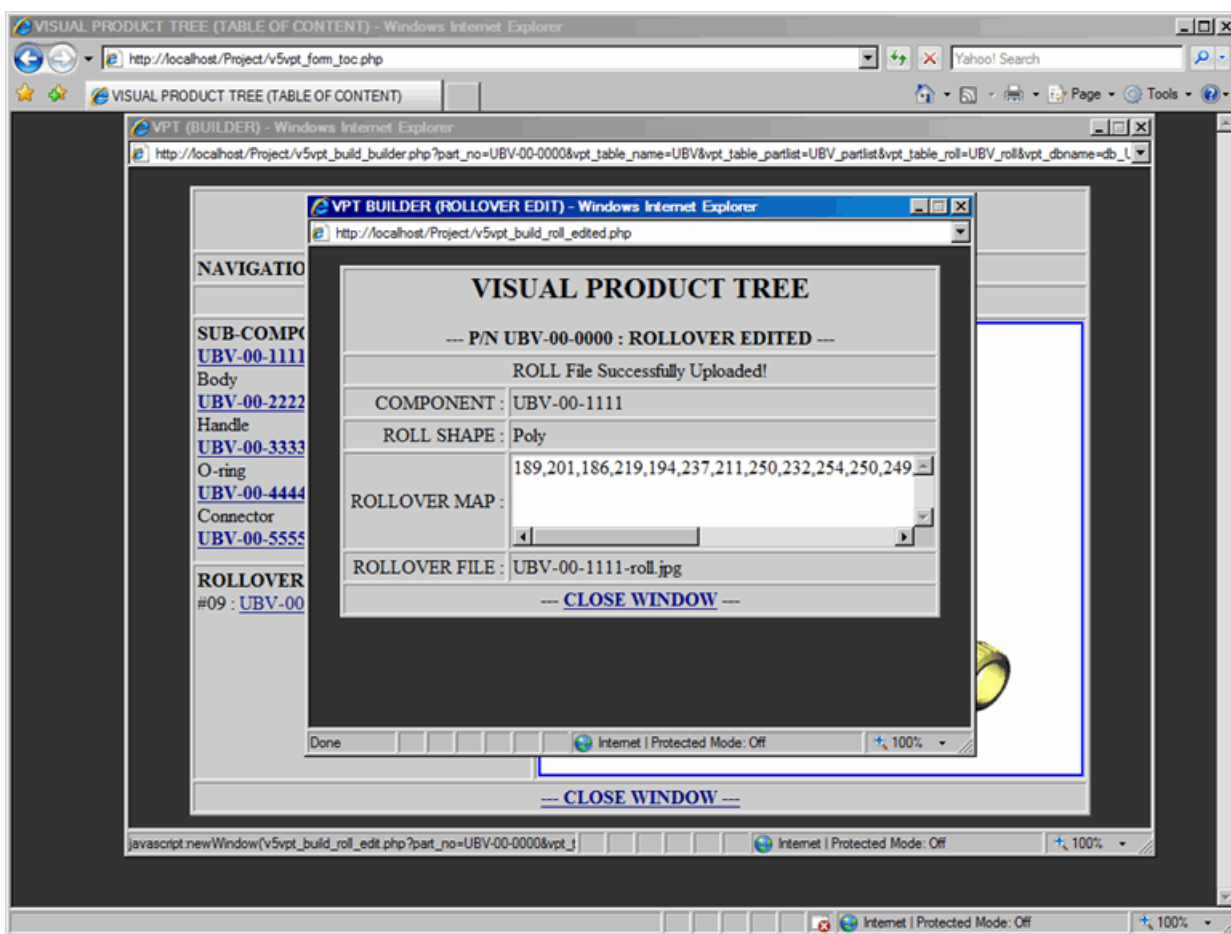

Follow these steps to check the edited rollover effect:

- In the Rollover area - Move the mouse over part number to check the rollover image is correct
- In the Sub-Component area - Move the mouse over part number and check if rollover is working
- In the Main Image area - Move the mouse over the Image Map area and check if rollover is working

 Figure 37: Builder - Rollover Edited

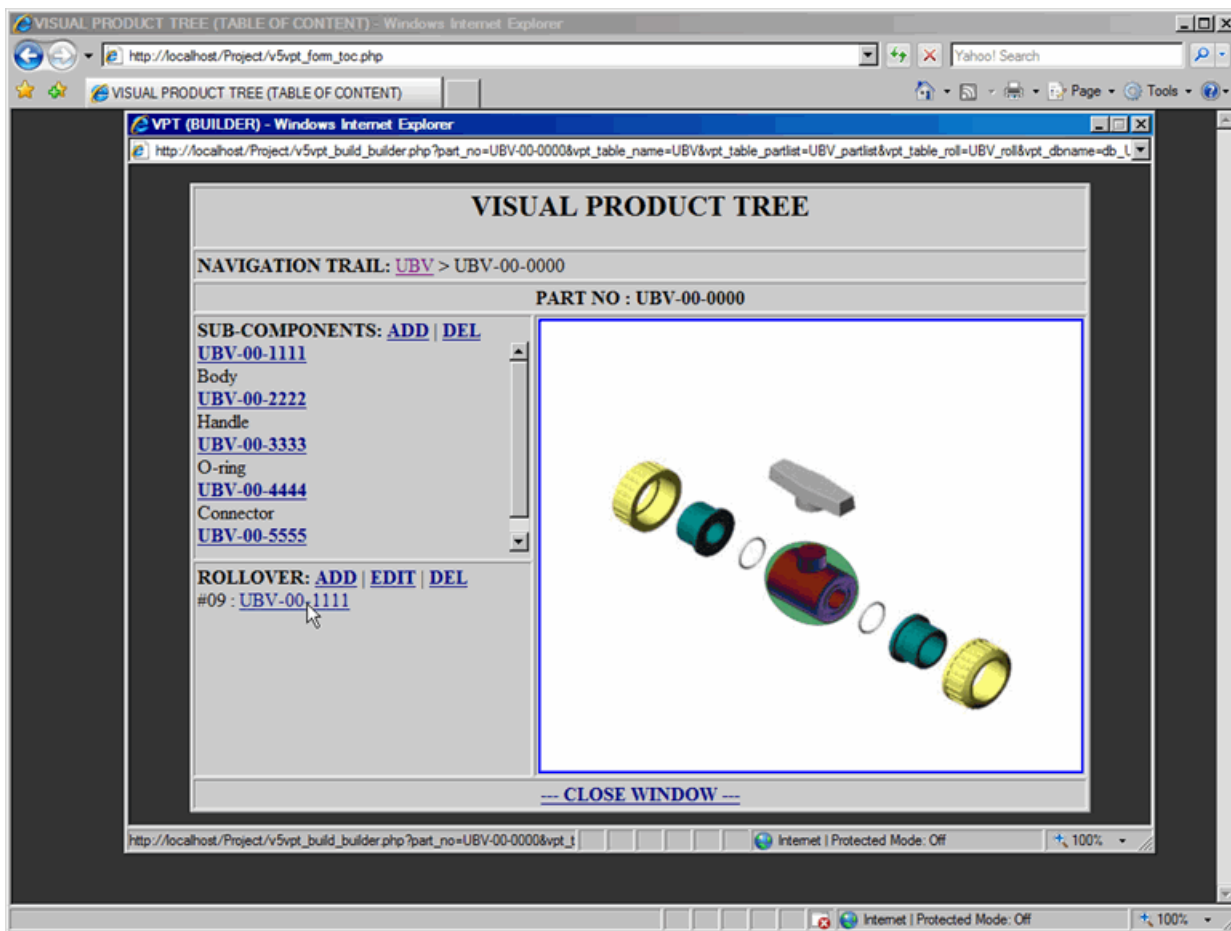

Builder - Delete Rollover

This document describes how to delete rollover of parts in Builder


In order to delete rollover of any component, proceed with the following steps:

1. In the Builder window, from the Rollover area, click on Delete link; which will display Delete Rollover Component Selection dialog box, as shown in *Figure 38: Builder - Rollover Delete Form* on page 42.
2. From Select Rollover to Delete drop-down list, select a component to delete rollover.
3. Submit the form to process your request to delete rollover.



Note: Multiple rollovers can be shown for the same component; Therefore, each rollover can be identified by its unique Rollover ID number in the Rollover Area.

 Figure 38: Builder - Rollover Delete Form

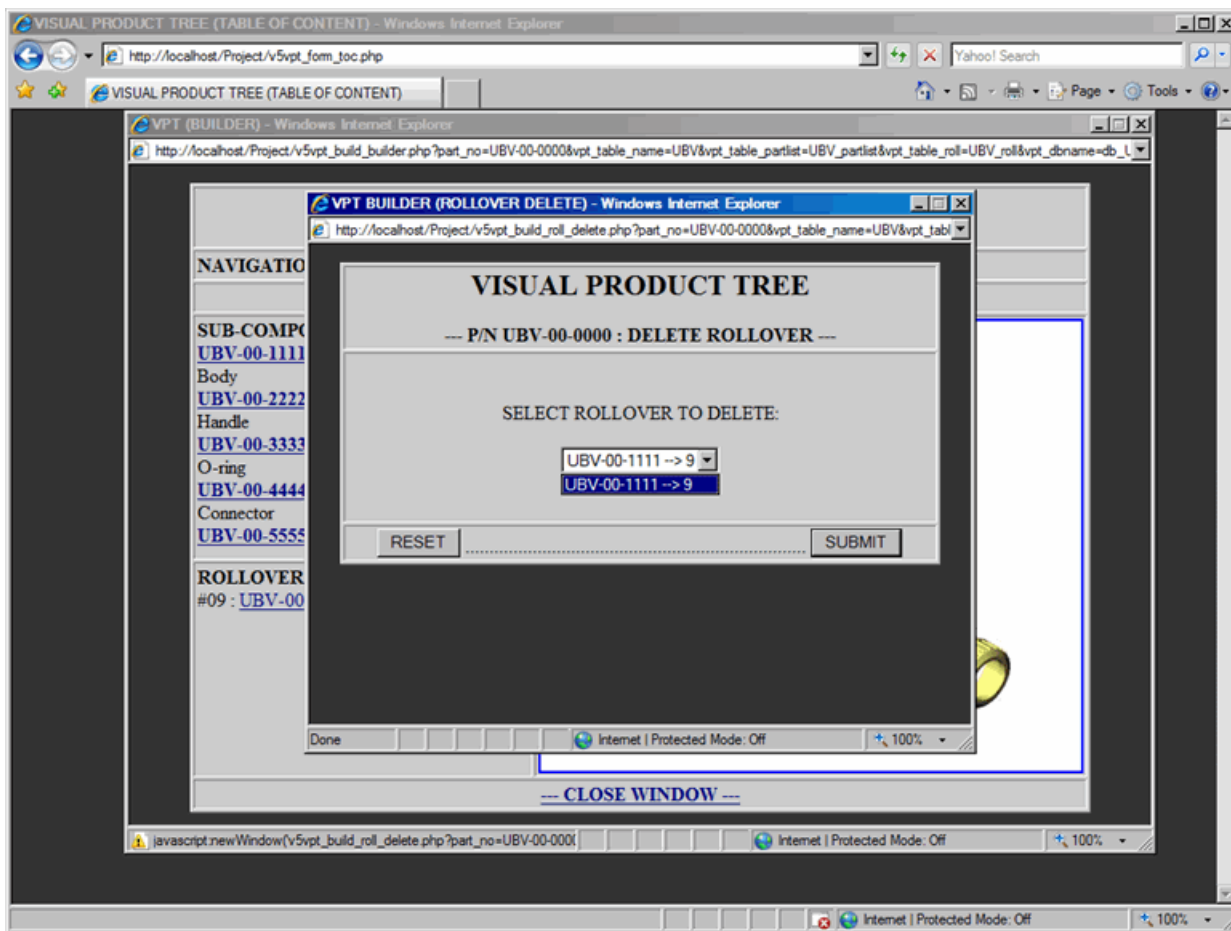

Once the Delete Rollover Form is submitted, confirmation window will be displayed as shown in *Figure 39: Builder - Rollover Delete Confirmation* on page 43.

Click on the Close Window link and rollover will be deleted for the component from the Rollover Area, as shown in *Figure 40: Builder - Rollover Deleted* on page 44.

Figure 39: Builder - Rollover Delete Confirmation

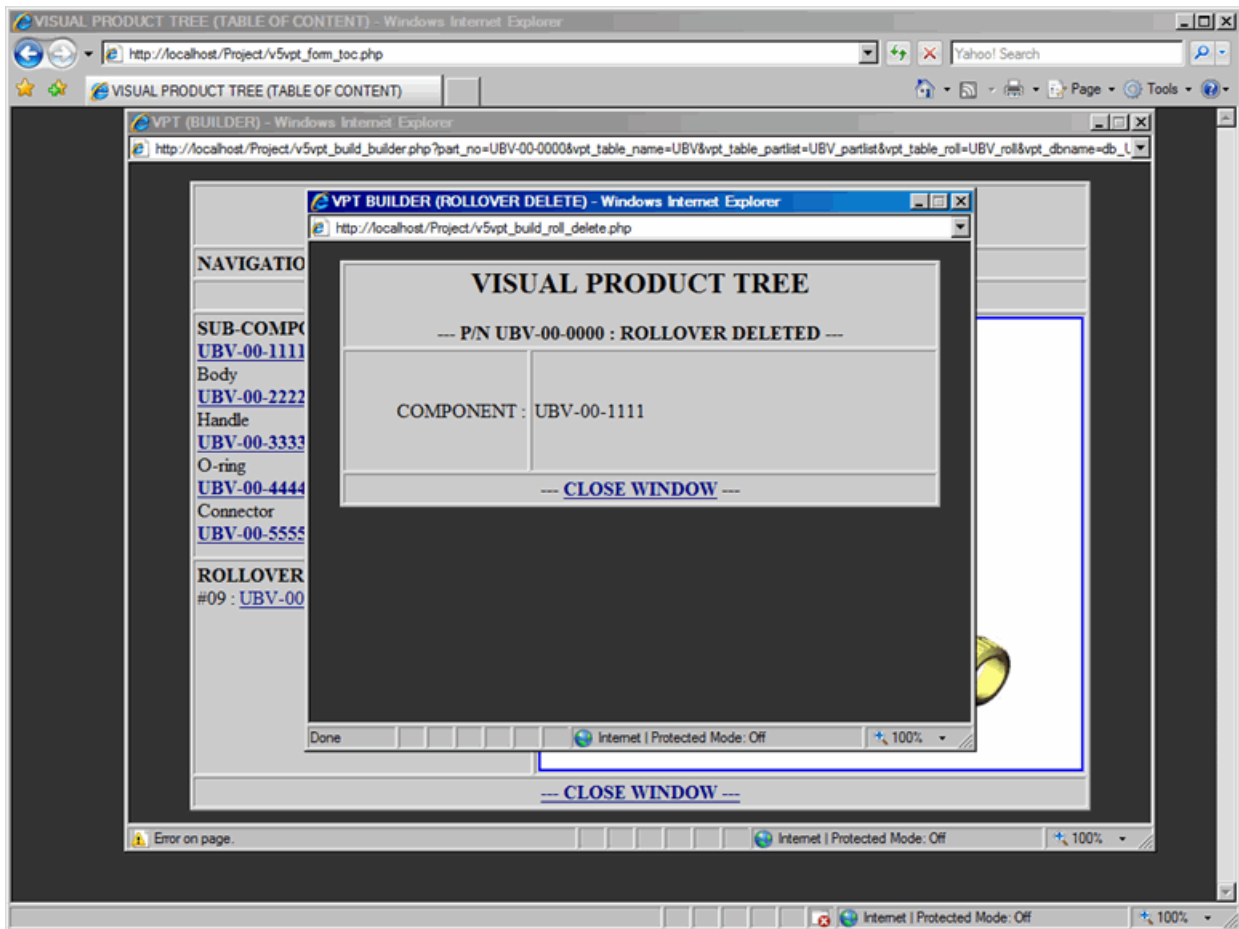 


Figure 40: Builder - Rollover Deleted

VISUAL PRODUCT TREE (TABLE OF CONTENT) - Windows Internet Explorer

http://localhost/Project/v5vpt_form_toc.php

Yahool Search

VISUAL PRODUCT TREE (TABLE OF CONTENT)

VPT (BUILDER) - Windows Internet Explorer

http://localhost/Project/v5vpt_build_builder.php?part_no=UBV-00-0000&vpt_table_name=UBV&vpt_table_partlist=UBV_partlist&vpt_table_rol=UBV_rol&vpt_dbname=db_U

VISUAL PRODUCT TREE

NAVIGATION TRAIL: [UBV](#) > UBV-00-0000


PART NO : UBV-00-0000

SUB-COMPONENTS: [ADD](#) | [DEL](#)

- [UBV-00-1111](#)
Body
- [UBV-00-2222](#)
Handle
- [UBV-00-3333](#)
O-ring
- [UBV-00-4444](#)
Connector
- [UBV-00-5555](#)

ROLLOVER: [ADD](#) | [EDIT](#) | [DEL](#)

No Rollover Exist

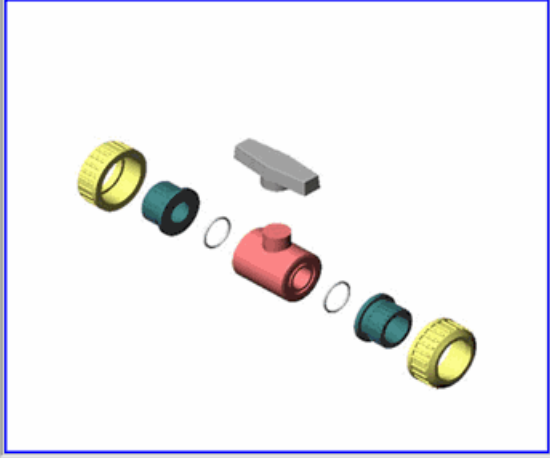

--- CLOSE WINDOW ---

Done

Internet | Protected Mode: Off

100%

Internet | Protected Mode: Off

100%

VPT_Reviewer

Reviewer - Reviewer

This document describes how to use viewer in Reviewer

VPT Reviewer is the final result of Visual Product Tree which will be seen by users, customers, field service technicians, manufacturing engineers, manufacturing operations and technical training personnel.

Once the drill-down structure of the product is created using Builder; finally check the integrity and completeness of Visual Product Tree using the Reviewer. Navigating through the Reviewer is almost identical to the Builder.

From the TOC, click on Reviewer link, which will display Reviewer window.

Reviewer window has five major aspects as described below, refer to *Figure 41: Reviewer 1* on page 46, *Figure 42: Reviewer 2* on page 47 and *Figure 43: Reviewer 3* on page 48:

1. Part No: As you navigate from top level assembly to the bottom level of components; Part No will change accordingly.
2. Sub-components Area: Lists all the components that belongs to the specified assembly or sub-assembly.
 - Part No of the listed components as a link, clicking on the Part No will direct you to that specific sub-assembly (or component)
 - If sub-components have attachments such as PDF documentation or 3D Model, links will be displayed next to the Part No
 - Part Description of the listed components
3. Navigation Trail: As you create the drill-down structure of the Visual Product Tree from top level assembly to the bottom level of components; Navigation trail will be created for each level. Navigation trail is an easy way to move (or jump) backward to any specific level in the assembly.
4. Interactive Image Area: Visual presentation of Part Image with Rollover Image Map
 - Part image can be interactive with the Rollover Image Map
 - As you move mouse over sub-assembly (or component); rollover image will be displayed, if it has Image Map
 - As you move mouse over sub-assembly (or component), tool-tip may be displayed with the rollover image
 - Clicking on the Image Map area will direct you to that specific sub-assembly (or component)
5. Close Window Link: Use this link to close the browser window. Do not close the window by clicking on 'X' of the window.



Note: From the Sub-Component area, click on the Part No to navigate through the top-down-structure of the Visual Product Tree.



Note: From the Interactive Image area, click on the Part Image to navigate through the top-down-structure of the Visual Product Tree.



Note: From the Navigation Trail area, click on the Part No to navigate through the bottom-up-structure of the Visual Product Tree.

Figure 41: Reviewer 1

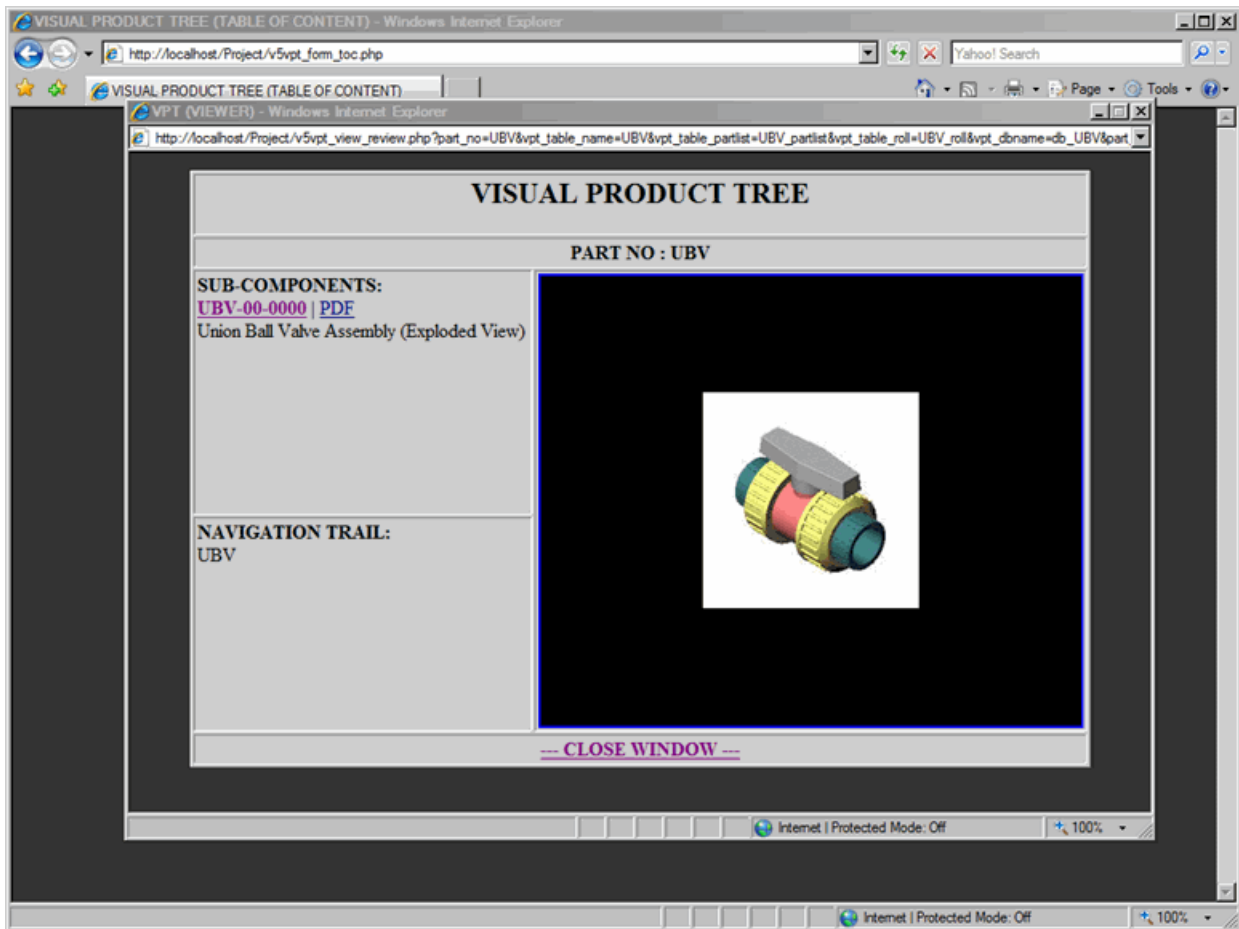 


Figure 42: Reviewer 2


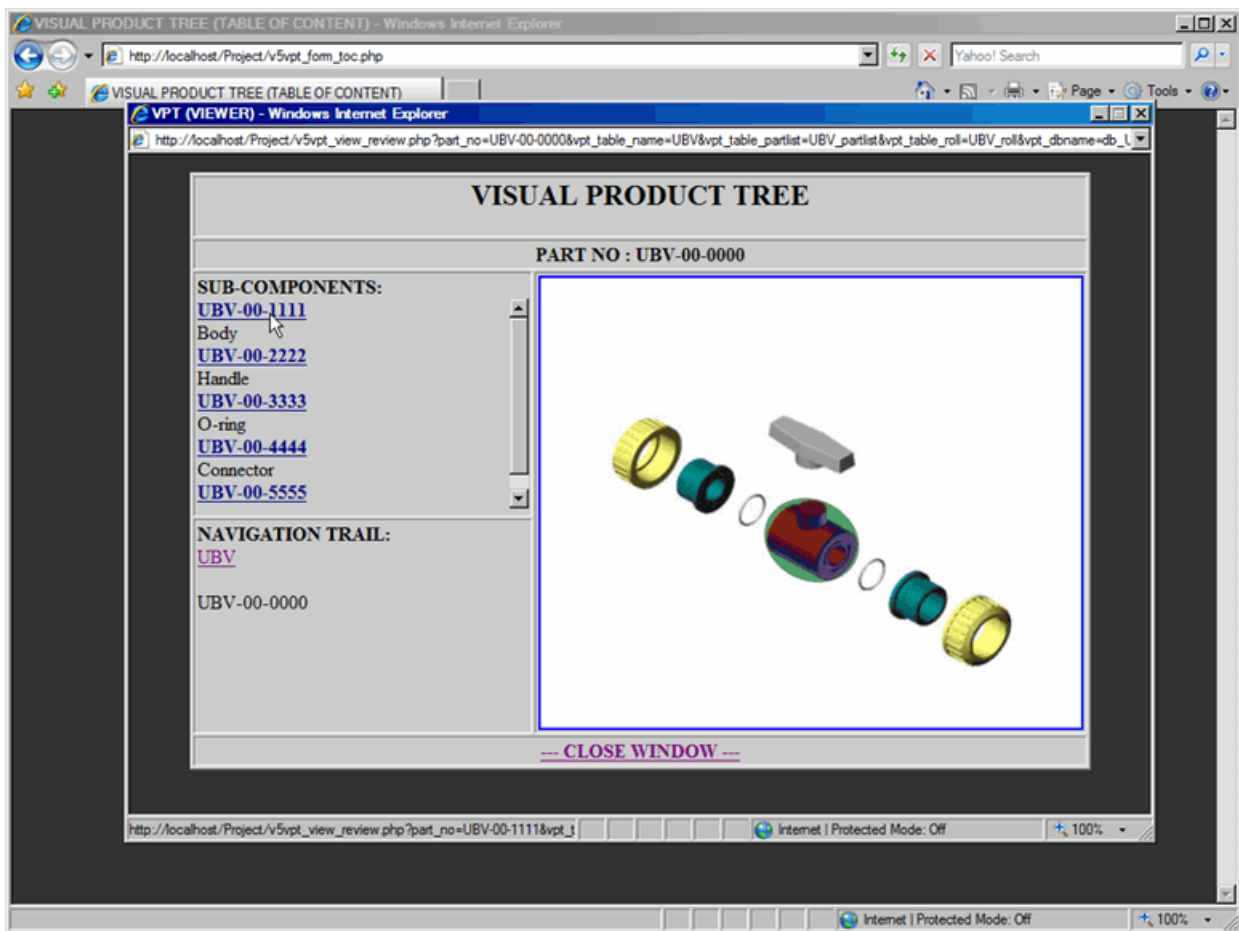 


Figure 43: Reviewer 3

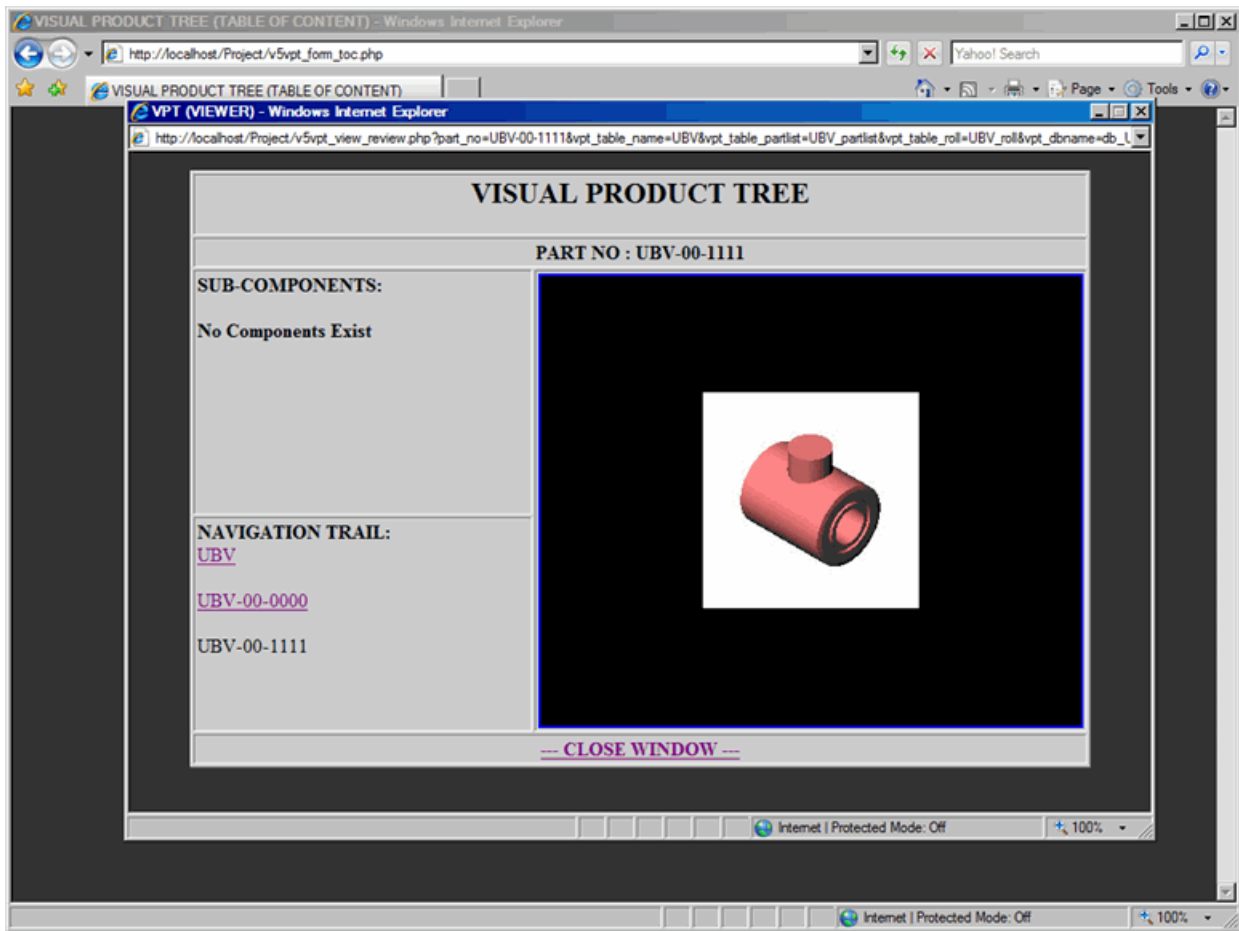 

Reviewer - Attachment

This document describes how to view attachments in Reviewer

From the TOC, click on Reviewer link, which will display Reviewer window.

Some times in the Sub-Component area, next to the Part No, PDF and 3D Model links are displayed. That means PDF documentation and 3D CAD Model is available to view for that specific assembly, or sub-assembly or component. Refer to [Figure 44: Reviewer - Attachment 1](#) on page 49.

By clicking on PDF link, PDF documentation will open in Adobe Acrobat application. Refer to [Figure 45: Reviewer - Attachment 2](#) on page 50.

By clicking on 3D Model link, CAD 3D Model will open in eDrawing application.

Figure 44: Reviewer - Attachment 1

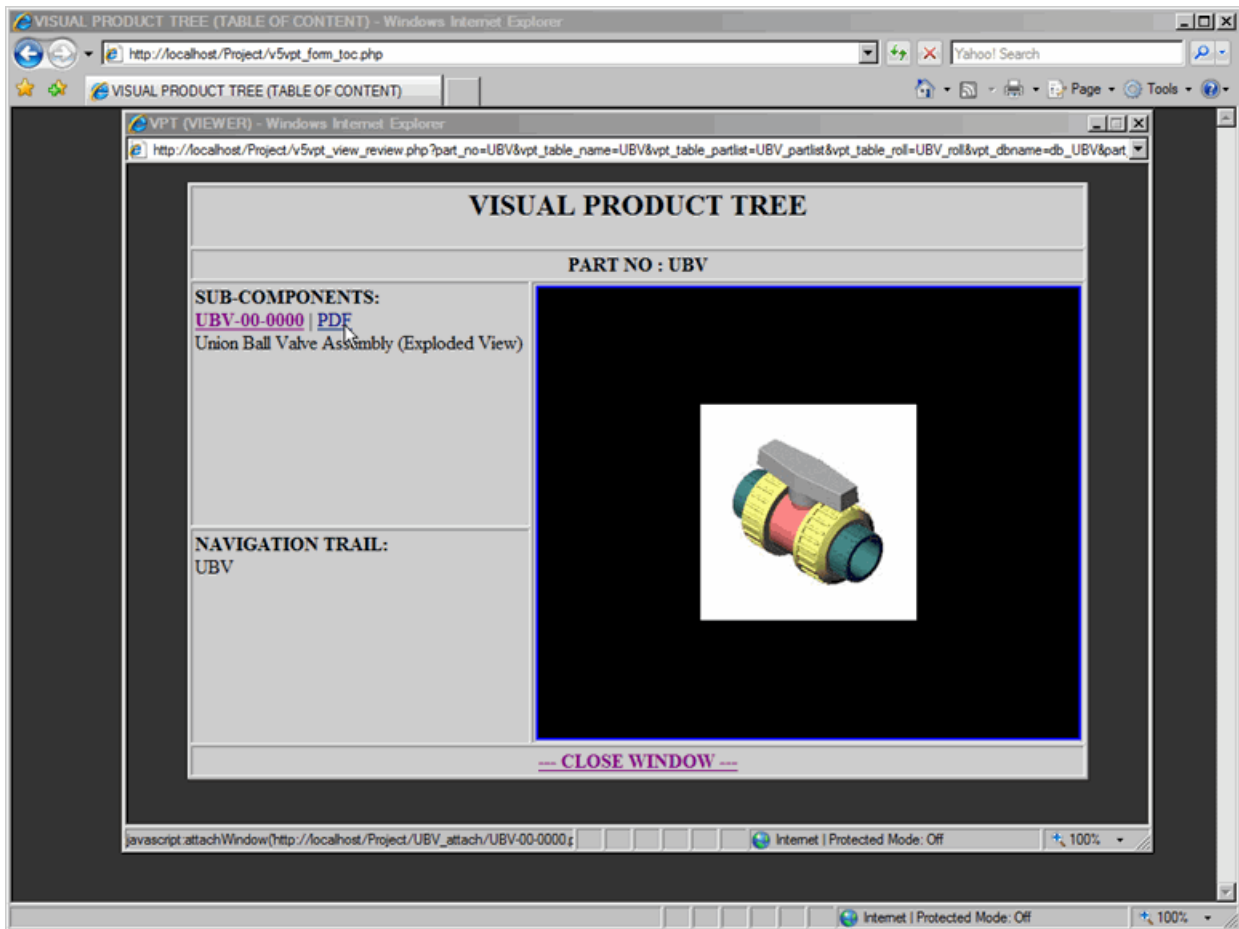 


Figure 45: Reviewer - Attachment 2

VISUAL PRODUCT TREE (TABLE OF CONTENT) - Windows Internet Explorer

Adobe Acrobat - [UBV-00-0000[1].pdf]

File Edit Document Tools View Window Help

100%

BOOKMARKS

THUMBNAILS

COMMENTS

SIGNATURES

UNION BALL VALVE ASSEMBLY

PRODUCT #	PRODUCT DESCRIPTION	OPERATION #	S.O.E. RANGE	REVISION LEVEL
UBV-000	UNION BALL VALVE	00-00000-000	From To	00-0000-000

■ TCQ ● VERIFY ▲ WORK CONTENT

ITEM #	PART #	DESCRIPTION	QTY
1	UBV-111	Body, Union Ball Valve	1
2	UBV-222	Handle, Union Ball Valve	1
3	UBV-333	O-ring, Union Ball Valve	2
4	UBV-444	Connector, Union Ball Valve	2
5	UBV-555	Union Nut, Union Ball Valve	2

PROCEDURE: UNION BALL VALVE ASSEMBLY

#	EXPLANATION:
1	Insert O-rings (UBV-333, 2x) into the groove of the Body (UBV-111, 1x), on both ends
2	On one end of the Body, align the Connector (UBV-444, 1x) to the Body and lock it with the Union Nut (UBV-555, 1x)
3	Repeat Step 2 for the other end of the Body
4	Mount the Handle (UBV-222, 1x) on top of the Body

Date: 3/27/006 File: UBV-000-Assy-SOE.doc Page 1 of 1

Flat View - BOM (Bill-of-materials)

This document describes how to view Bill-of-materials

This view displays a complete Product Tree in the form of Bill-of-Material. Product hierarchy is displayed according to the top level assembly, their sub-assemblies and their components, with part numbers and their descriptions.

- From the TOC, click on Flatview link, which will display Flatview window, as shown in [Figure 46: VPT Table-of-Content](#) on page 51 and [Figure 47: Flat View - Bill of Material](#) on page 52
- Click on the Close Window link to return to the VPT TOC window.

Figure 46: VPT Table-of-Content

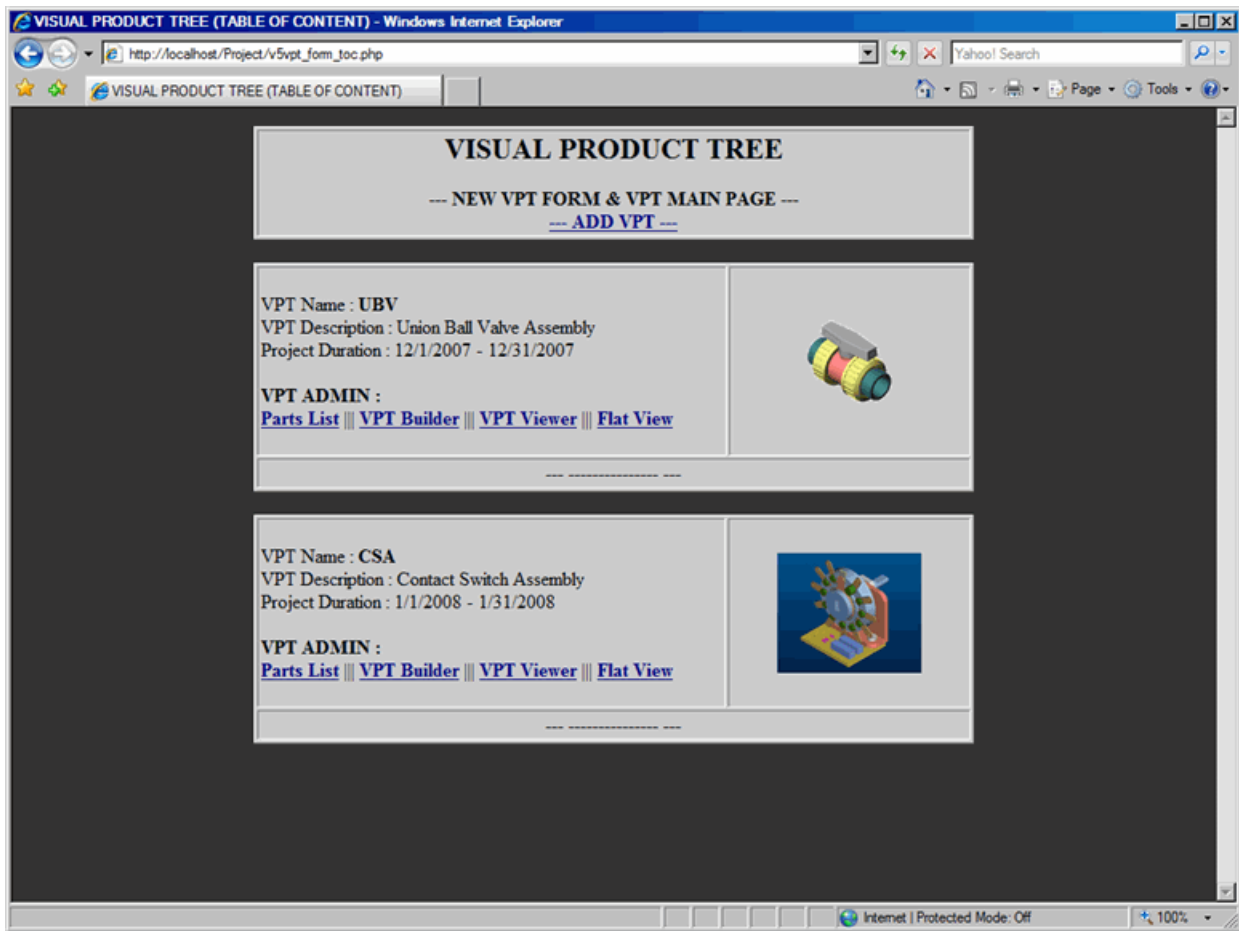 


Figure 47: Flat View - Bill of Material

The screenshot shows a web browser window titled "VPT (FLAT VIEW) - Windows Internet Explorer". The address bar contains the URL: `http://localhost/Project/v5vpt_view_flatview.php?vpt_table_name=UBV&vpt_table_partlist=UBV_partlist&vpt_dbname=db_UBV`. The main content area displays a "VISUAL PRODUCT TREE" with the following structure:

- UBV.....>.....Union Ball Valve Assembly
 - UBV-00-0000.....>.....Union Ball Valve Assembly (Exploded View)
 - UBV-00-1111.....>.....Body
 - UBV-00-2222.....>.....Handle
 - UBV-00-3333.....>.....O-ring
 - UBV-00-4444.....>.....Connector
 - UBV-00-5555.....>.....Union Nut

At the bottom of the tree, there is a button labeled [CLOSE WINDOW](#). The browser's status bar at the bottom shows "Done", "Internet | Protected Mode: Off", and two zoom levels set to 100%.